

Hybrid Inverter

Installation and Operation Manual

www.aforeenergy.com

Version: HL2012-01



Afore New Energy Technology (Shanghai) Co., Ltd.

T +86-21-54326236 F +86-21-54326136 E info@aforeenergy.com
Ad Building 7, No.333 Wanfang Rd, Minhang District, Shanghai, China. 201112



Afore New Energy Technology (Shanghai) Co., Ltd.



Contents

1. About This Manual	1
1.1 Scope of Validity	1
1.2 Target Group	1
2. Safety & Symbols	1
2.1 Safety Precautions	1
2.2 Explanations of Symbols	2
3. Introduction.	3
3.1 Basic Instruction	3
3.2 Operation Modes	3
3.2.1 Self-Use	3
3.2.2 Time of Use	4
3.2.3 Selling First	6
3.2.4 Back-Up	6
4. Installation.	7
4.1 Pre-installation	7
4.1.1 Unpacking & Package List	7
4.1.2 Product Overview	8
4.1.3 Mounting Location	9
4.2 Mounting	11
4.3 Electrical Connection	12
4.3.1 PV Connection	13
4.3.2 Battery Connection	14
4.3.2.1 Lithium battery communication connection	17
4.3.2.2 Lead acid battery-NTC	17
4.3.3 Multi Inverter Parallel	18
4.3.4 AC Connection	19
4.3.5 DRM	21
4.3.6 CT or Meter Connection	21
4.4 Communication Connection.	24
4.5 Earth Connection.	25

5. Operation	26
5.1 Control Panel	26
5.2 Menu Overview	27
5.3 Control Panel	27
5.3.1 Time & Date	28
5.3.2 Safety	28
5.3.3 Lithium Battery	29
5.3.4 PV Mode	29
5.3.5 Lead Acid	30
5.3.6 Energy Management System (EMS Param)	30
5.3.7 Timing of Use	31
5.3.8 AC Charging	32
5.3.9 Forced Charging	32
5.3.10 Forced Discharging.	33
5.3.11 Protection Parameters	34
5.3.12 Multi-machine in Parallel	34
5.3.13 DRM Setting (DRMS)	35
5.3.14 Ground detection	36
5.3.15 Enable Power Quality Response Modes	36
5.3.16 Disable Power Quality Response Modes.	40
5.3.17 Active Power Mode Set	41
5.3.18 Frequency protection range (Freq Range) Setting	42
5.3.19 Voltage protection range (Volt Range) set.	43
5.3.20 Version.	44
5.3.21 Install Dual Meters	44
5.3.22 Active anti-islanding protection	45
6. Power ON/OFF	45
6.1 Power ON	45
6.2 Power OFF	45
6.3 Restart	45
7. Maintenance & Trouble Shooting	46
7.1 Maintenance	46
7.2 Trouble Shooting	46
8. Specifications	57

1. About This Manual

1.1 Scope of Validity

This manual mainly describes the product information, guidelines for installation, operation, maintenance and troubleshooting. And this manual applies to Afore Single Phase Hybrid Inverter.

AF1K-SL-1 AF1.5K-SL-1 AF2K-SL-1 AF2.5K-SL-1 AF3K-SL-1
AF3.6K-SL-1
AF3K-SL AF3.6K-SL AF4K-SL AF4.6K-SL AF5K-SL AF5.5K-SL
AF6K-SL

Please keep this manual available all the time in case of any emergency.

1.2 Target Group

This manual is for qualified personnel. The tasks described in this manual must only be performed by qualified personnel.

2. Safety & Symbols

2.1 Safety Precautions

1. All work on the inverter must be carried out by qualified electricians.
2. The PV panels and inverter must be connected to the ground.
3. Do not touch the inverter cover until 5 minutes after disconnecting both DC and AC power supply.
4. Do not touch the inverter enclosure when operating, keep away from materials that may be affected by high temperatures.
5. Please ensure that the used device and any relevant accessories are disposed of in accordance with applicable regulations.
6. Afore inverter should be placed upwards and handled with care in delivery. Pay attention to waterproof. Do not expose the inverter directly to water, rain, snow or spray.
7. Alternative uses, modifications to the inverter not recommended. The warranty can become void if the inverter was tampered with or if the installation is not in accordance with the relevant installation instructions.
8. The RCMUS is integrated inside the inverter.
9. The product is not tested to section 5 of AS/NZS 4777.2:2020 and should not be installed in multiple inverter combinations without external devices in accordance with the requirements of AS/NZS 4777.1.

2.2 Explanations of Symbols


Afore inverter strictly comply with relevant safety standards. Please read and follow all the instructions and cautions during installation, operation and maintenance.

	Danger of electric shock The inverter contains fatal DC and AC power. All work on the inverter must be carried out by qualified personnel only.
	Beware of hot surface The inverter's housing may reach uncomfortably hot 60°C (140°F) under high power operation. Do not touch the inverter enclosure when operation.
	Residual power discharge Do not open the inverter cover until 5 minutes after disconnection both DC and AC power supply.
	Important notes Read all instructions carefully. Failure to follow these instructions, warnings and precautions may lead to device malfunction or damage.
	Do not dispose of this device with the normal domestic waste.
	Refer to manual before service.
	CE mark The inverter complies with the requirements of the applicable CE guidelines.

3. Introduction

3.1 Basic Instruction

The Afore AF-SL series hybrid inverters are designed to increase energy independence for homeowners. Energy management is based on time-of-use and demand charge rate structures, significantly reduce the amount of energy purchased from the public grid and optimize self-consumption.

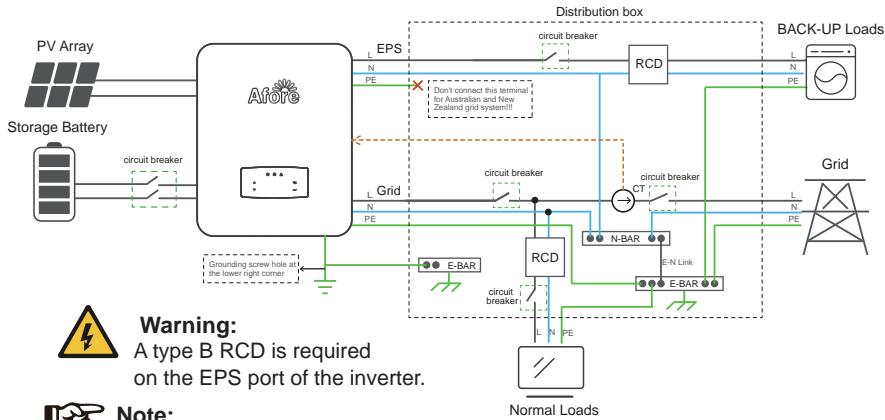


However if an external residual current device (RCD) (type B is recommended) is mandatory, the switch must be triggered at a residual current of 300 mA (recommended). RCD of other specifications can also be used according to local standard.

To maintain the neutral continuity in standalone mode, as required by Australian safety code, the neutral cable on the AC Load output port and AC-Grid Port must be connected together.

3.2 Operation Modes

3.2.1 Self-Use

The Self-Use mode is for the regions with low feed-in tariff and high electricity prices. The energy produced by the PV system is used to optimize self-consumption needs. The excess energy is used to recharge the batteries, any remaining excess is then exported to the grid.

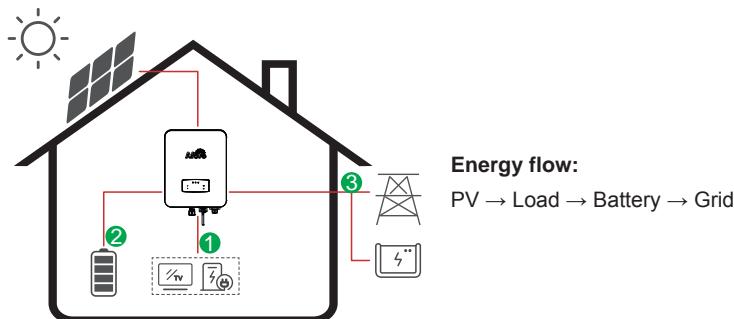

Note: Advance Setting

When select 0 W under P_Feed menu, the inverter will export zero energy to the grid.


When select xx W under P_Feed menu, the inverter will export customized energy to the grid.

3.2.2 Time of Use


The Time of Use mode is designed to reward customers who do their part to reduce demand on the electric grid, particularly during peak usage periods. Use most of your electricity from PV energy and during off-peak time periods, and you could significantly lower your monthly bill.

A. Charge Setting

PV Charge Mode

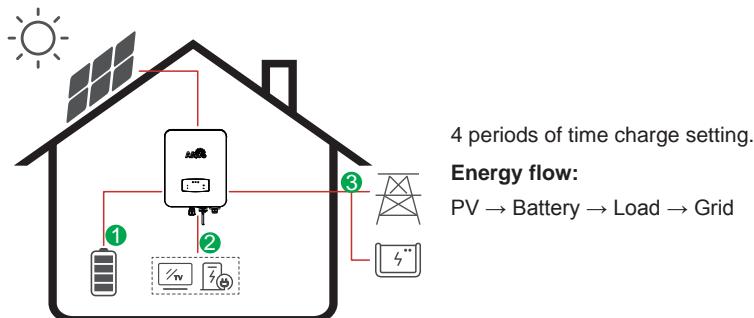


AC Charge Mode

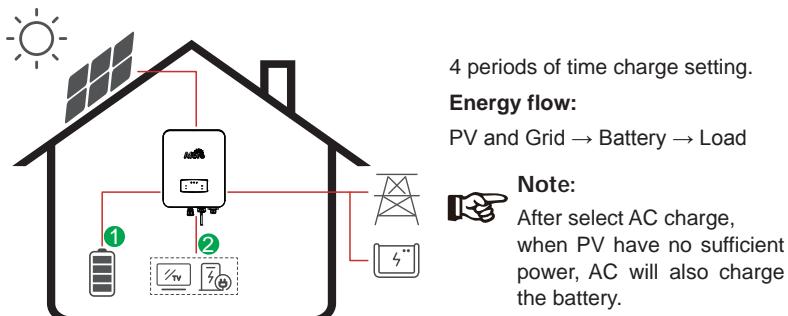

B. Discharge


4 periods of time discharge setting

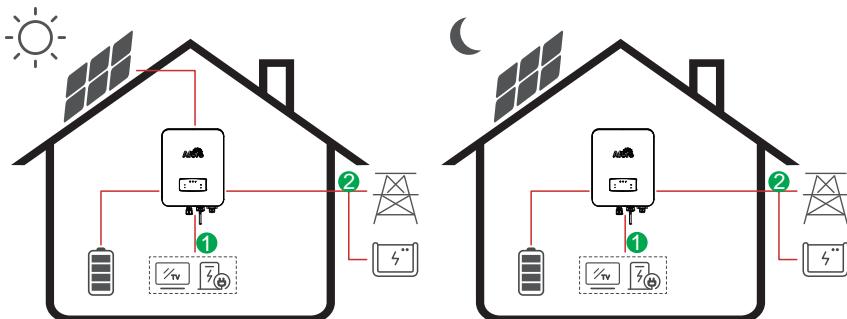

Energy flow: Battery and PV → Load → Grid

C. Forbidden Discharge


4 periods of time discharge setting, the battery will be charged firstly.

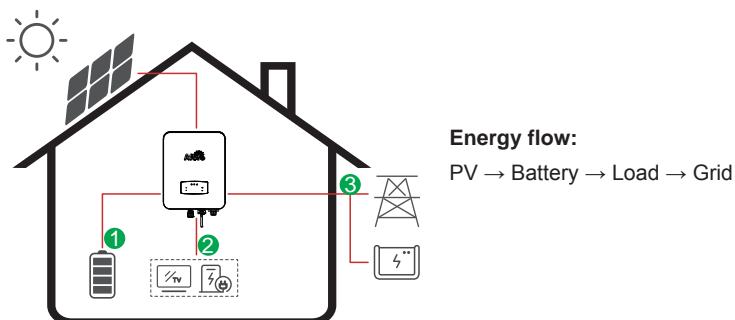

Energy flow:
PV → Battery → Load → Grid


3.2.3 Selling First

The Selling First mode is suitable for the regions with high feed-in tariff.

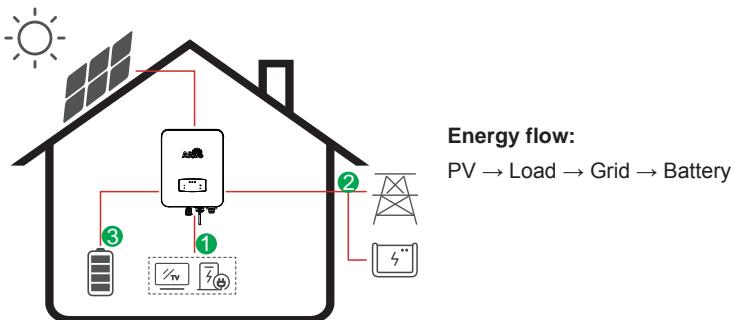

3.2.4 Back-Up

When the grid fails, the system will automatically switch to Back-Up mode. The back-up loads can be supplied by both PV and battery energy.

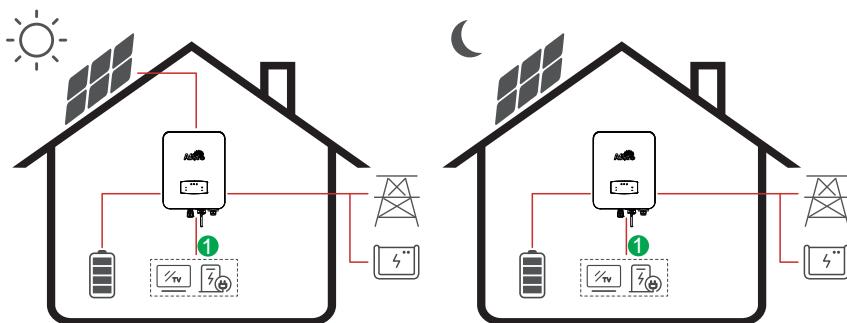

Energy flow: PV and Battery → Load

4. Installation

4.1 Pre-installation


4.1.1 Unpacking & Package List

Unpacking

On receiving the inverter, please check to make sure the packing and all components are not missing or damaged. Please contact your dealer directly for supports if there is any damage or missing components.

Package List

Open the package, please check the packing list shown as below.

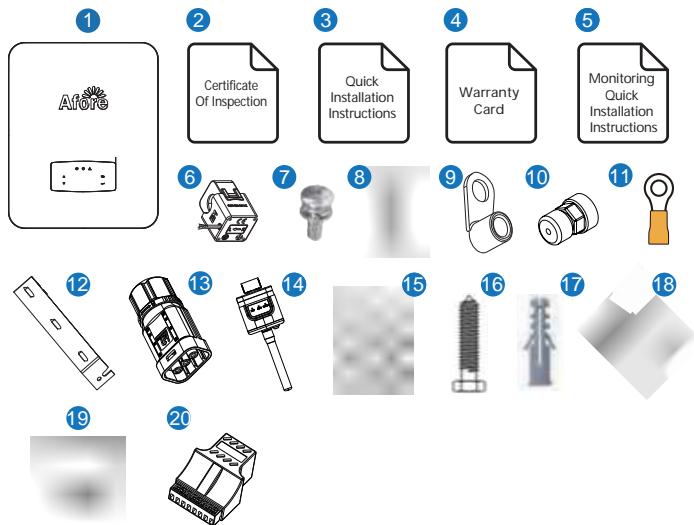


No.	Qty	Items	No.	Qty	Items
1	1	Hybrid Inverter	11	1	Grounding Terminal
2	1	Certificate Of Inspection	12	1	Wall Mounting Bracket
3	1	Quick Installation Instructions	13	1	Battery Connector
4	1	Warranty Card	14	1	Monitor Module
5	1	Monitoring Quick Installation Instructions	15	1/2	DC Connector
6	1	CT	16	3	Mounting Bracket Screw
7	4	AC Wiring Cover Screw	17	3	Plastic Expansion Tube
8	1	Security Screw	18	1	Smart Meter (Optional)
9	4	AC Wiring Terminal	19	1	AC Waterproof Cover
10	2	Communication Connectors	20	1	Communication Adapter


Note:


DC connectors Qty.: The AF1K-SL-1 ~ AF3.6K-SL-1 is 1 pair of DC plug connector, the AF3K-SL ~ AF6K-SL is 2 pairs.

4.1.2 Product Overview

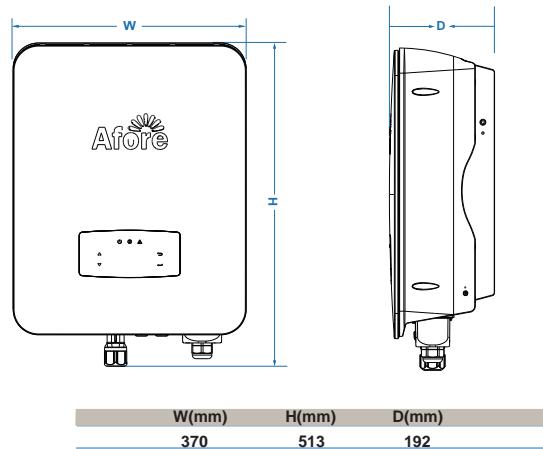

Inverter Terminals

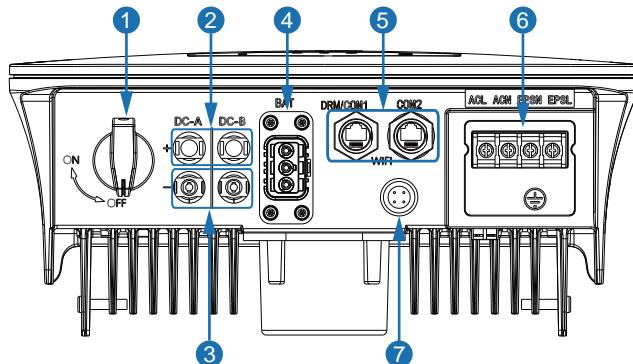

No.	Items	No.	Items
1	DC Switch	5	Communication Port
2	DC Connectors (+) For PV Strings	6	AC Port & EPS Port
3	DC Connectors (-) For PV Strings	7	Monitor Module Port
4	Battery Port		


4.1.3 Mounting Location

The inverters are designed for indoor and outdoor installation (IP65), to increase the safety, performance and lifespan of the inverter, please select the mounting location carefully based on the following rules:


- The inverter should be installed on a solid surface, far from flammable or corrosion materials, where is suitable for inverter's weight and dimensions.
- The ambient temperature should be within $-25^{\circ}\text{C} \sim 60^{\circ}\text{C}$ (between -13°F and 140°F).
- The installation of inverter should be protected under shelter. Do not expose the inverter to direct sunlight, water, rain, snow, spray lightning, etc.



- The inverter should be installed vertically on the wall, or lean back on plane with a limited tilted angle. Please refer to below picture.


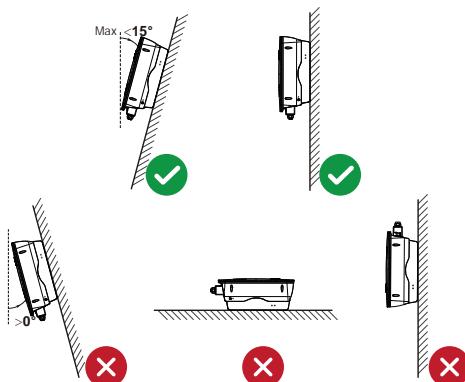


- Leave the enough space around inverter, easy for accessing to the inverter, connection points and maintenance.

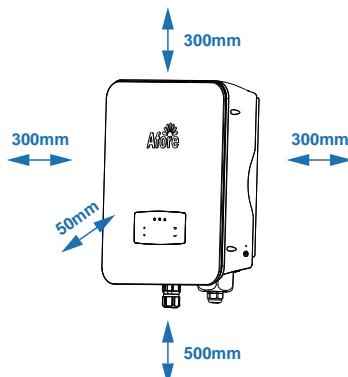


4.2 Mounting


Step 1

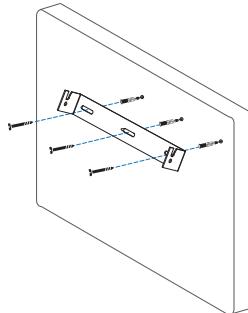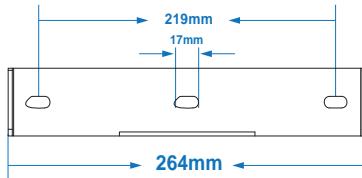


Step 2

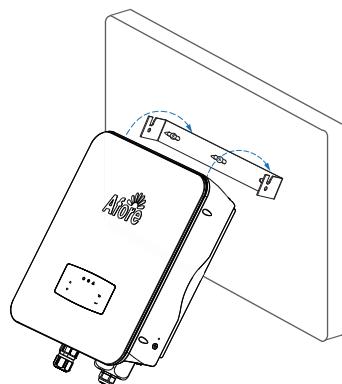

Step 3

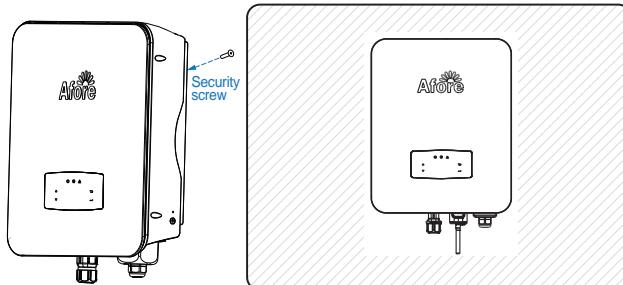

4.3 Electrical Connection

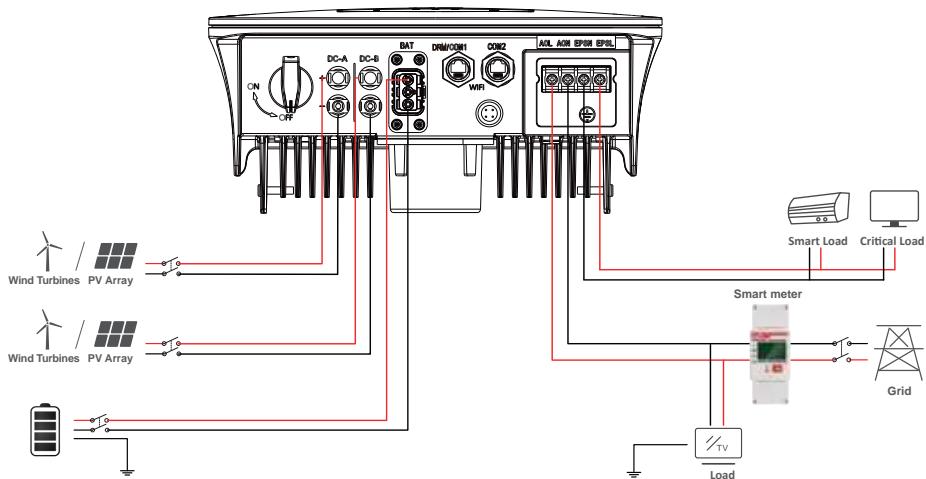

Communication Adapter pin assignment

No.	COM1	COM2
1	NTC+	Meter 485A
2	NTC-	Meter 485B
3	Dry Contact	BAT 485A
4	Dry Contact	BAT CANH
5	REF GEN/0	BAT CANL
6	COM LOAD/0	BAT 485B
7	485A	CTU
8	485B	CTN



Note:

For diesel generators or multi-machine parallel use, please contact the manufacturer, and provide installation and operation instructions separately.

4.3.1 PV Connection


The AF-SL series hybrid inverter has one/two MPPT channels, can be connected with one/two strings of PV panels. Please make sure below requirements are followed before connecting PV panels and strings to the inverter:

- The open-circuit voltage and short-circuit current of PV string should not exceed the reasonable range of the inverters.
- The isolation resistance between PV string and ground should exceed 300 kΩ.
- The polarity of PV strings are correct.
- Use the DC plugs in the accessory.
- The lightning protector should be equipped between PV string and inverter.
- Disconnect all of the PV (DC) switch during wiring.


**Warning:**

The fatal high voltage may on the DC side, please comply with electric safety when connecting.

Please make sure the correct polarity of the cable connected with inverter, otherwise inverter could be damaged.

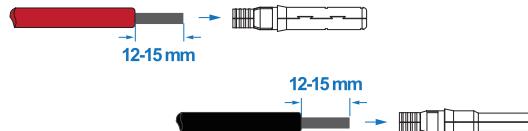Step 1**Note:**


PV cable suggestion
Cross-section
 4mm^2

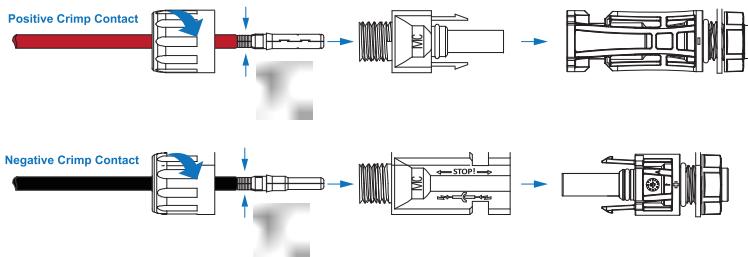Step 2**Note:**

Please use PV connector crimper to pinch the point of the arrow.

**Note:**

You'll hear click sound when the connector assembly is correct.

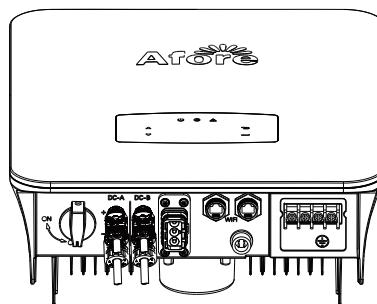Step 3


4.3.2 Battery Connection

AF-SL series hybrid inverters are compatible with lithium battery. For lead acid battery or batteries with other brands, please confirm with local distributor or Afore for technical support.

**Note:**

Set battery type and manufacturer, please refer to Chapter 5.3. BMS(Battery Management System)communication is needed between inverter and battery.


Step 1

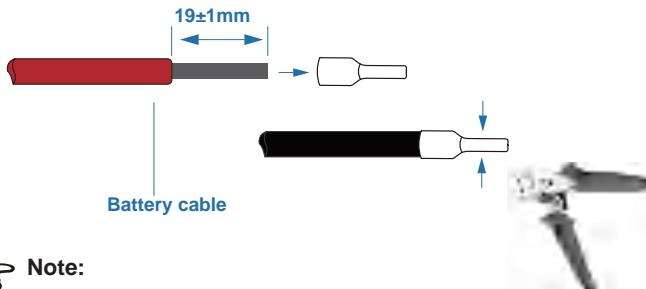**Note:**

Battery cable suggestion Cross - section 8-10 AWG
Please make sure the battery polarities are correct.


Step 2

Pass the crimped battery harness through the waterproof connector and the cover.

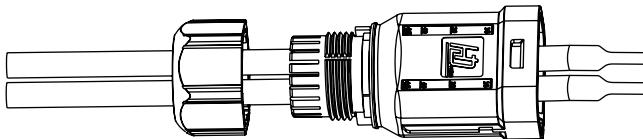


Step 3

Insert the wire harness into the terminals according to "+" and "-" polarity, make the insulated terminals parallel with the terminals , the crimping screw torque is $2.0\pm0.1\text{N.m}$

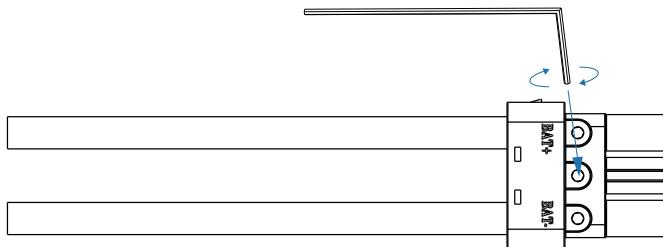


Step 4


A “click” sound will be heard when the connector assembly is correct.

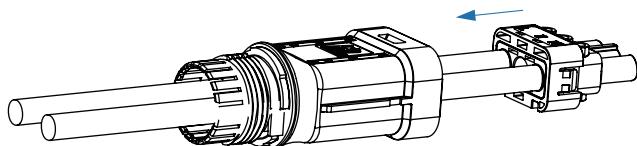**Step 5**

Use an open-end wrench to tighten the waterproof lock.

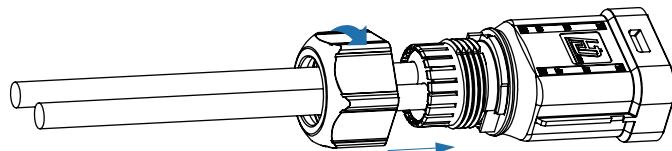
**Step 6**

Insert the battery connector into the inverter, if hear a “click”, it means the battery connection is finished.

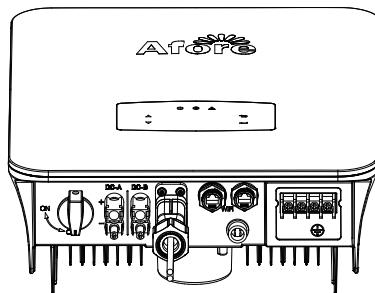


4.3.2.1 Lithium battery communication connection

The inverter uses RS485 cable to communicate with the Meter and CAN to communicate with the battery's BMS. The image below shows the assembly of the RS485/CAN communication cables.

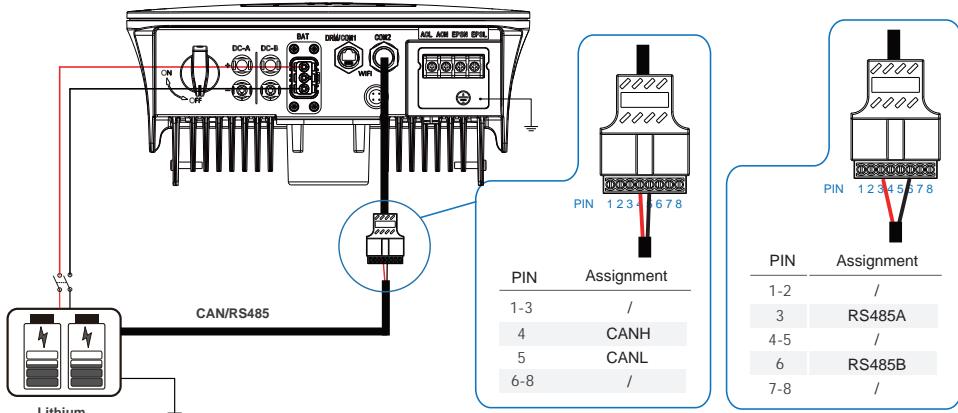

4.3.2.2 Lead acid battery-NTC

The NTC cable enables the communication between the inverter and Lead batteries.

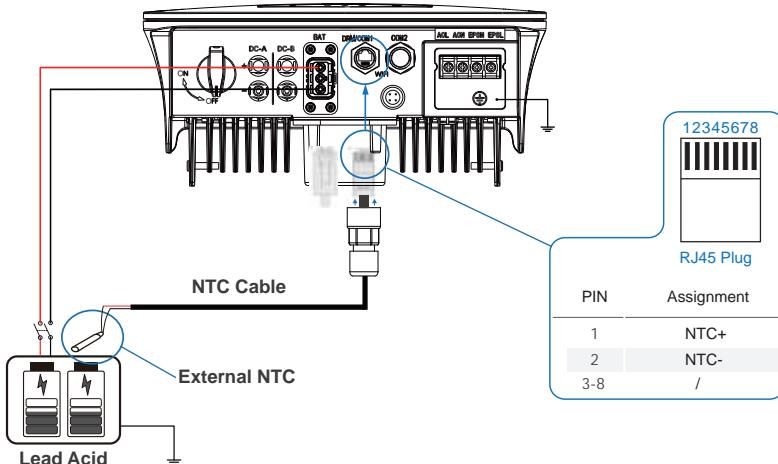


Note:




1. NTC (including connection line) is provided by battery manufacturers.
2. The NTC is external, and there is no NTC connection port on the lead -acid battery. NTC is used to test the working environment temperature of lead -acid batteries.
3. The Afore inverter does not include a connection terminal for a remote battery temperature sensor. If installing Afore inverter with lead acid batteries please check with Afore inverter for advice regarding charge settings.


4.3.3 Multi Inverter Parallel

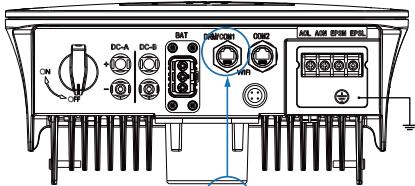

PIN	Assignment
1-6	/
7	485A
8	485B

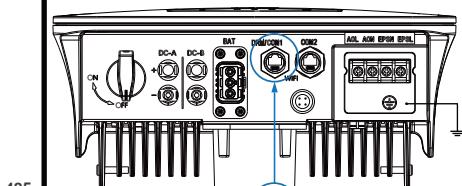

PIN	Assignment
1-6	/
7	485A
8	485B

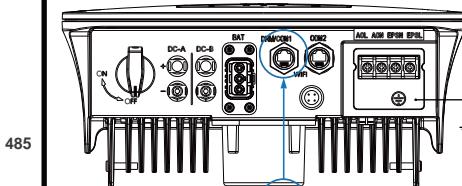

PIN	Assignment
1-6	/
7	485A
8	485B

4.3.4 AC Connection

The AC terminal contains “GRID” and “EPS”, GRID for load, and EPS for emergency load.

Before connecting, a separate AC breaker between individual inverter and AC input power is necessary. This will ensure the inverter be securely disconnected during maintenance and fully protected from current of AC input.

An extra AC breaker is needed for On-Grid connection to be isolated from grid when necessary. Below are requirements for the On-Grid AC-breaker.

Inverter Model	AC breaker specification
AF1-3.6K-SL-1	32A/200V/230V AC breaker
AF3-6K-SL	63A/200V/230V AC breaker



Note:


Qualified electrician will be required for the wiring.

Model	Wire Size	Cable (mm ²)	Torque value
1-6kW	8-10AWG	4-6	1.2N·m

Please follow steps for AC connection

- Connect DC protector or breaker first before connecting.
- remove insulation sleeve 11mm(0.5 inch) length, unscrew the bolts, insert the AC input wires according to polarities indicated on the terminal block and tighten the terminal screws.

Step 1

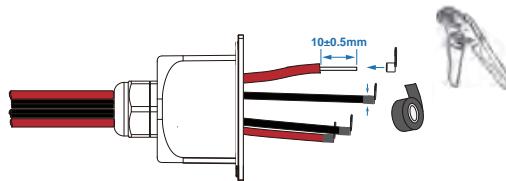

Note:



Cable suggestion
Cross-section 8-10AWG

**Note:**

The wiring terminals should be wrapped with insulation tape, otherwise it will cause a short circuit and damage the inverter.


**Note:**

The Max. power load connects to EPS port should not exceed the inverter's EPS Max. output power range.

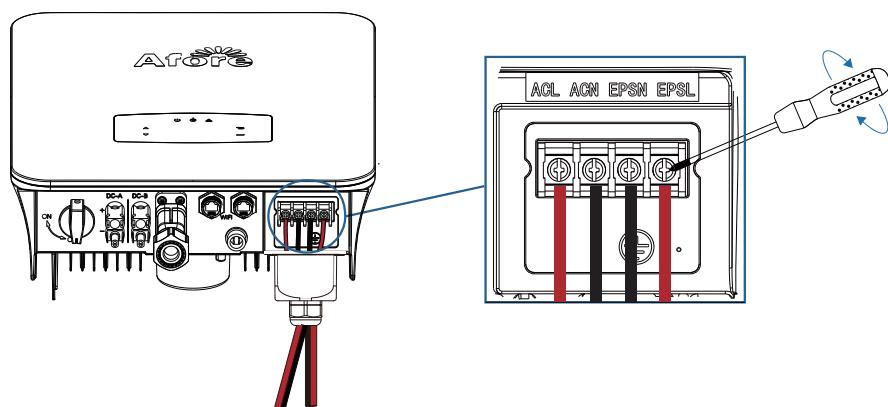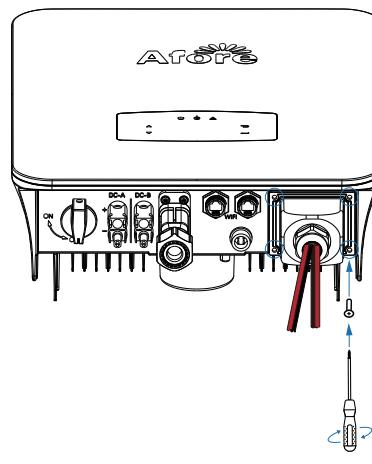
Step 2**Step 3****GRID EPS Load**

4.3.5 DRM

The inverter provides a terminal block for connecting to a demand response enabling device (DRED). The DRED asserts demand response modes (DRMs). The inverter detects and initiates a response to all supported demand response commands within 2s. The inverter only supports DRM0 : The inverter is in the state of "Turn off".

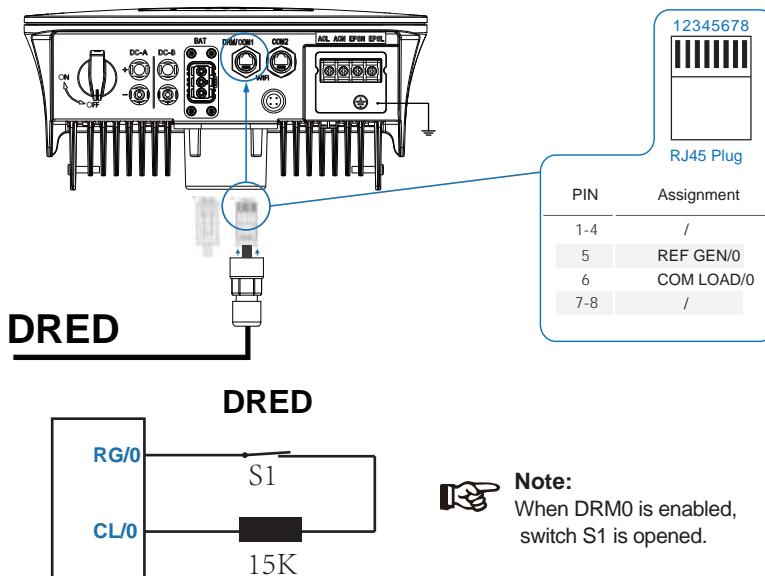


4.3.6 CT or Meter Connection

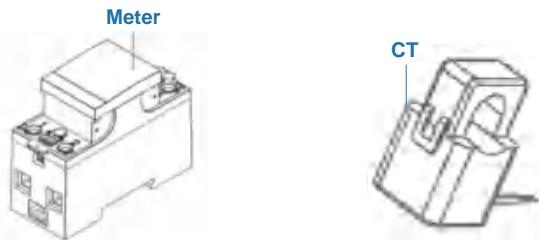


Model : SAPM-10KW
Manufacturer : MADUN
Rated power : 10KW

Model : SO7T
Manufacturer : SHITM
Rated power : 6KW


Install the CT

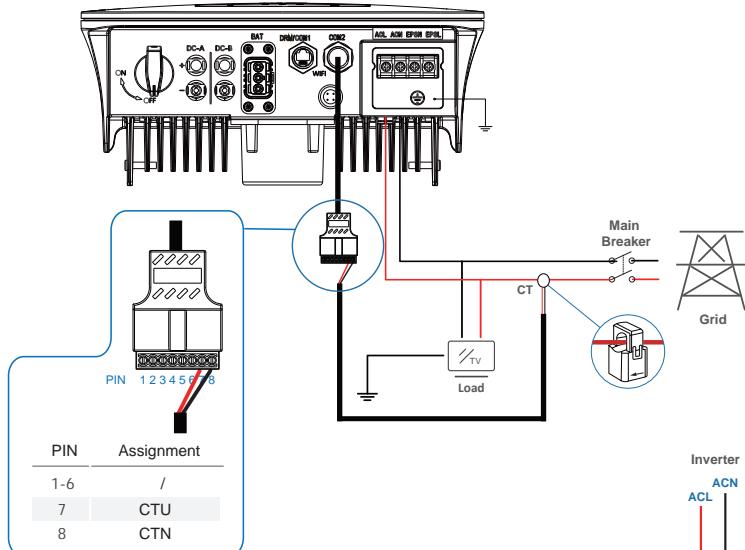

Install the Meter

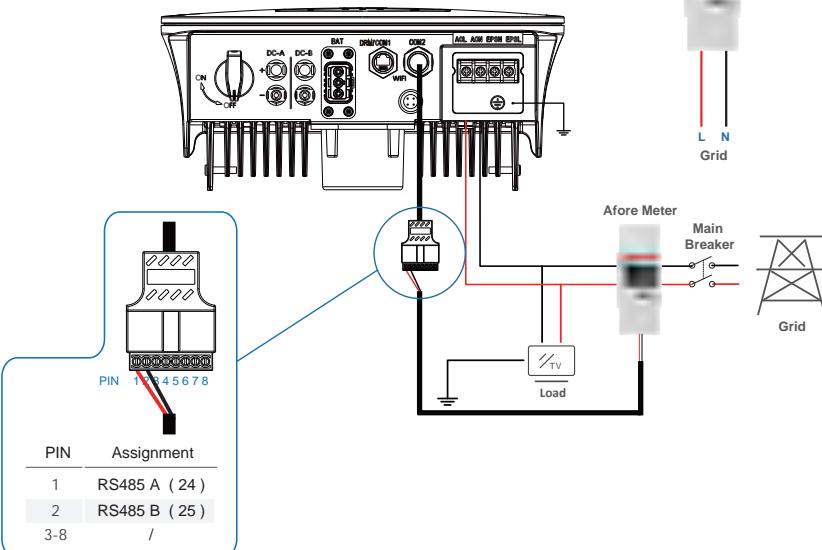

Install Dual Meters

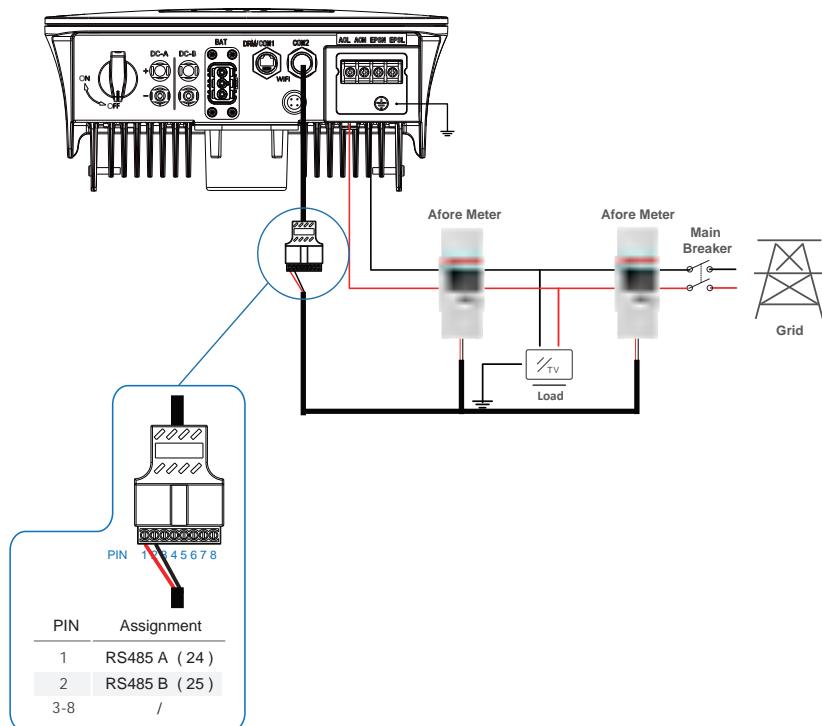


4.4 Communication Connection

The monitoring module could transmit the data to the cloud server, and display the data on the PC, tablet and smart-phone.


Install the WIFI / Ethernet / GPRS / RS485 Communication

WIFI / Ethernet / GPRS / RS485 communication is applicable to the inverter. Please refer to "Communication Configuration Instruction" for detailed instruction.

Step 1

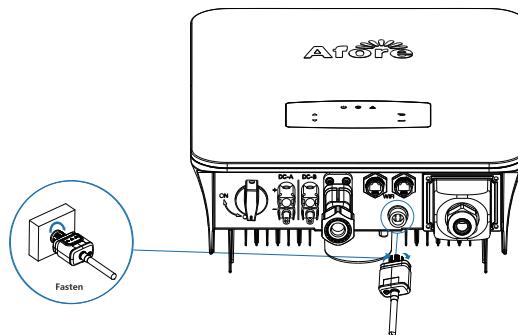

Step 2

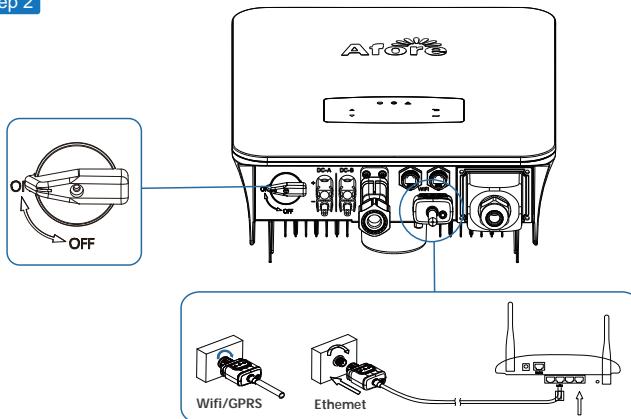


Turn on the DC switch and AC circuit breaker, and wait until the LED indicator on the monitoring module flashes, indicating that the monitoring module is successfully connected.


4.5 Earth Connection

**Note:**

A second protective earth (PE) terminal should be connected to the inverter. This prevents electric shock if the original protective PE wire fails.

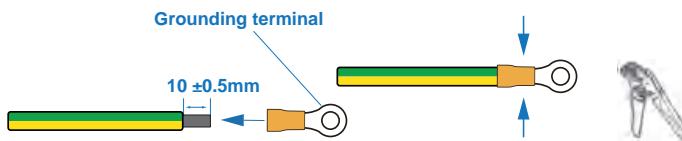Step 1**Note:**

Earth cable PE suggestion:
Cross-section (Copper) 4-6mm² / 10AWG

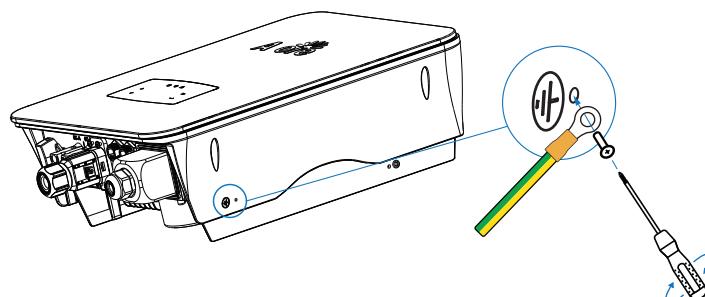Step 2


Fix the grounding screw to the grounding connection of the machine housing.

**Note:**

Make sure the earth cables on the inverter and solar panel frame are separately.

5. Operation

5.1 Control Panel

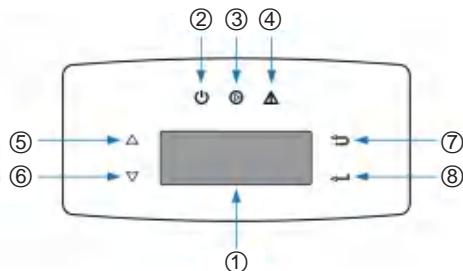

No.	Items	No.	Items
1	LCD Display	5	UP Touch Button
2	POWER LED Indicator	6	DOWN Touch Button
3	GRID LED Indicator	7	BACK Touch Button
4	FAULT LED Indicator	8	ENTER Touch Button


**Note:**

Hold UP/DOWN button can be rolling quickly.

	Sign	Power	Color	Explanation
POWER	ON	Green		The inverter is stand-by
	OFF			The inverter is power off
GRID	ON	Green		The inverter is feeding power
	OFF			The inverter is not feeding power
FAULT	ON	Red		Fault occurred
	OFF			No fault

AF-SL hybrid inverter has a LCD for clearly operating, and menu of the LCD can be presented as following:

5.2 Menu Overview

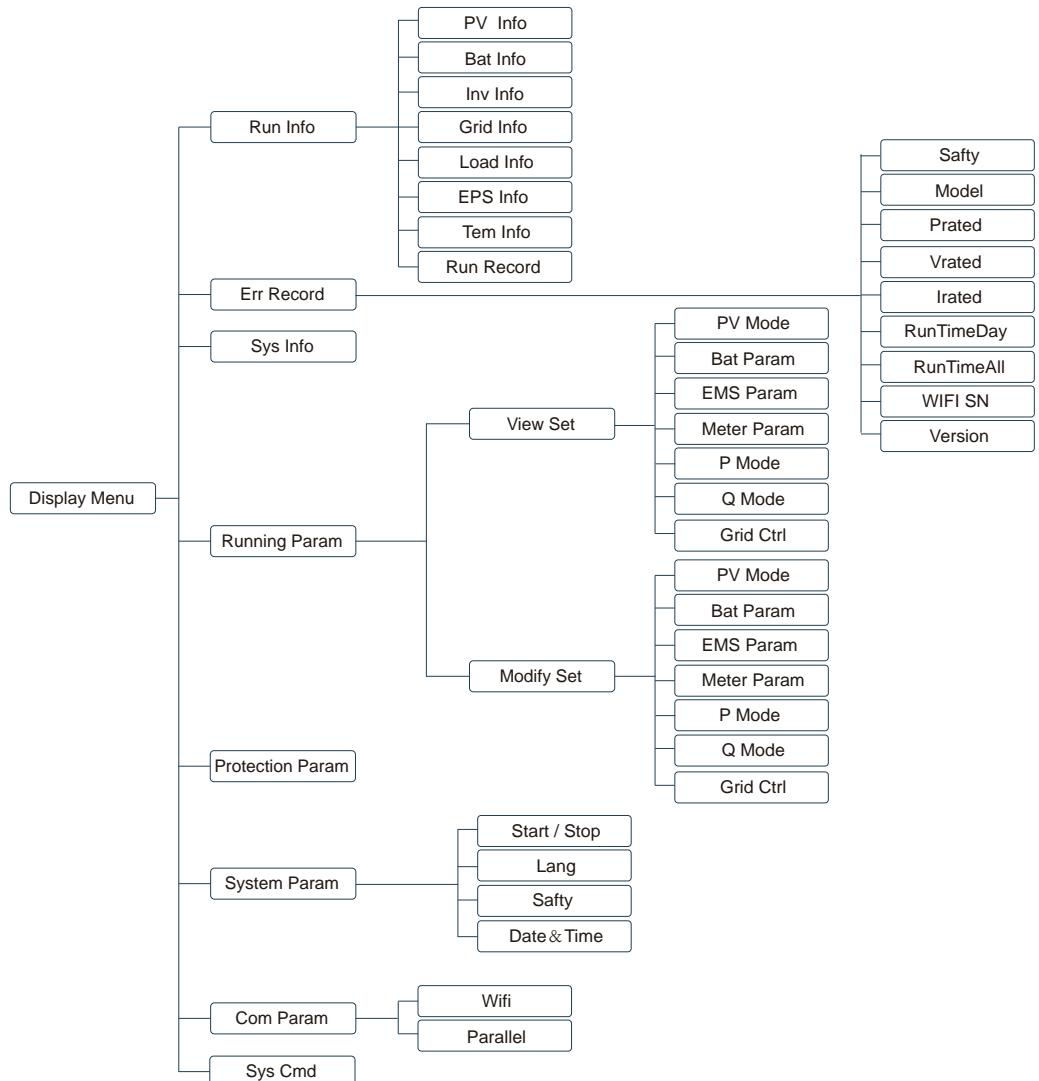


5.3 Inverter Setting

The setting is for AF-SL Hybrid inverter. Any doubts, please contact distributor for more details.


**Note:**

Password **** is divided into two passwords: parameter viewing and modifying parameters. When you need to view the parameters, please enter the password 0000. You need to modify the parameters, please contact the manufacturer.

5.3.1 Time & Date

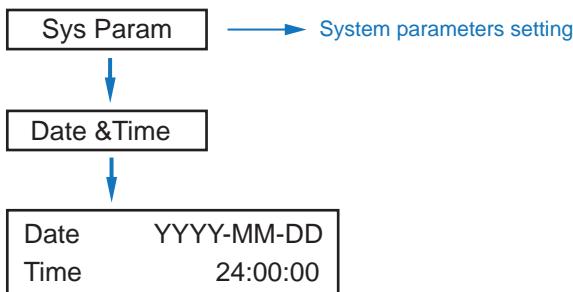


5.3.2 Safety

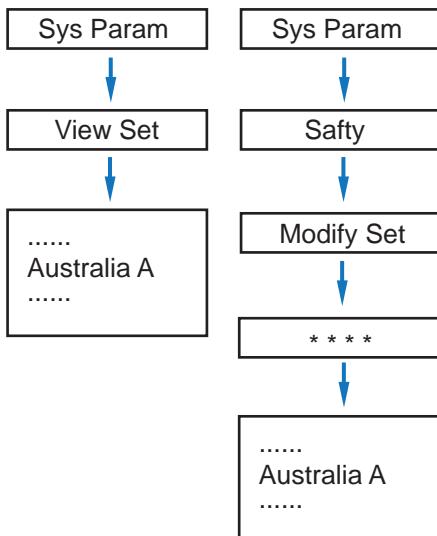**Note:**

For compliance to AS/NZS 4777.2:2020, please select Region from Australia A, B, C or New Zealand. Please contact your local grid operator on which Region to select.


5.3.3 Lithium Battery

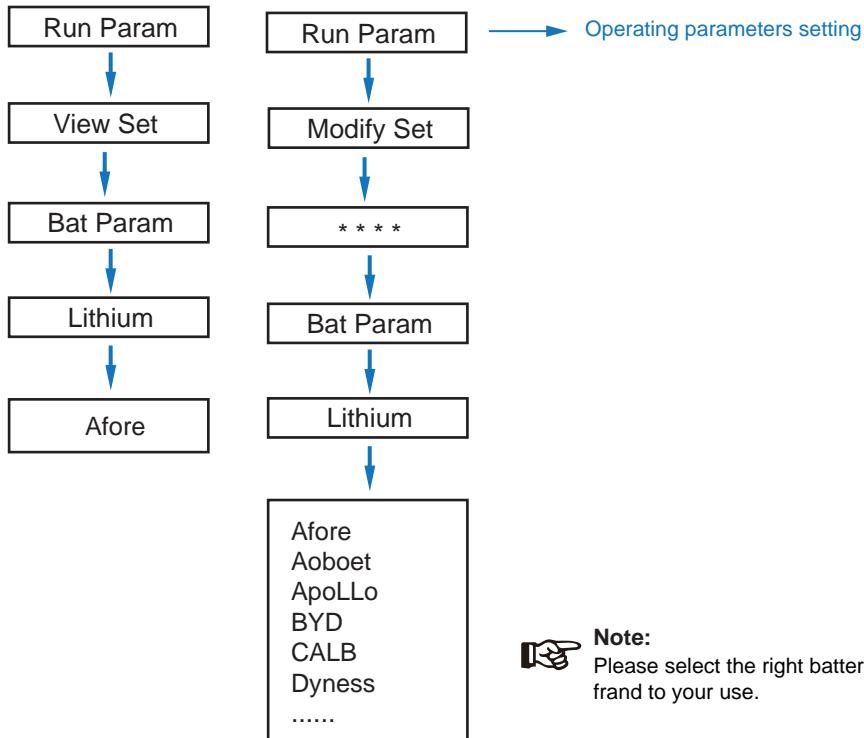

Note:

Please select the right battery brand to your use.


5.3.4 PV Mode

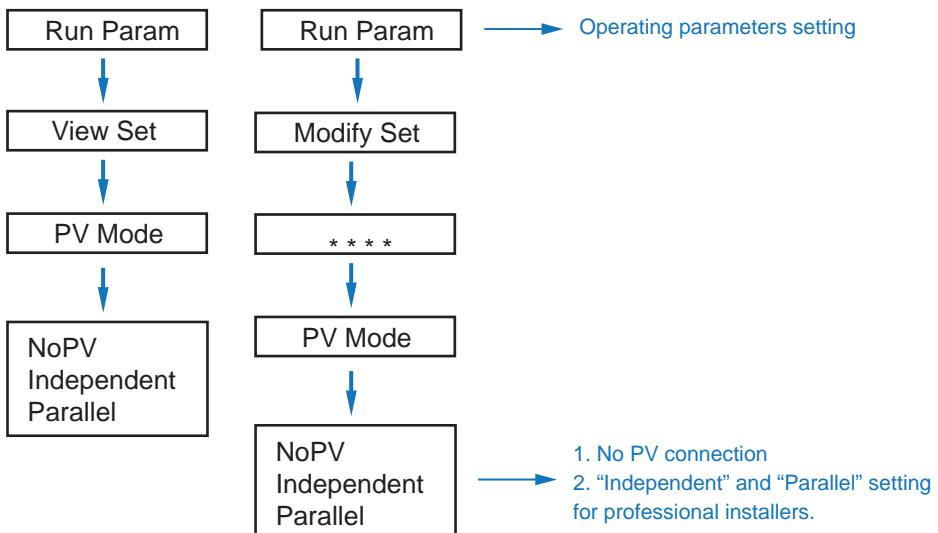


1. No PV connection

2. "Independent" and "Parallel" setting for professional installers.

5.3.5 Lead Acid

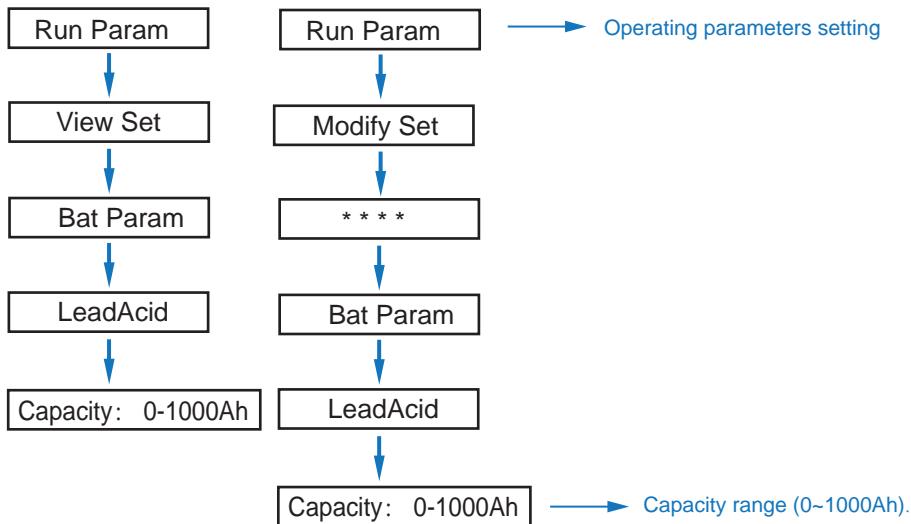


5.3.6 Energy Management System (EMS Param)

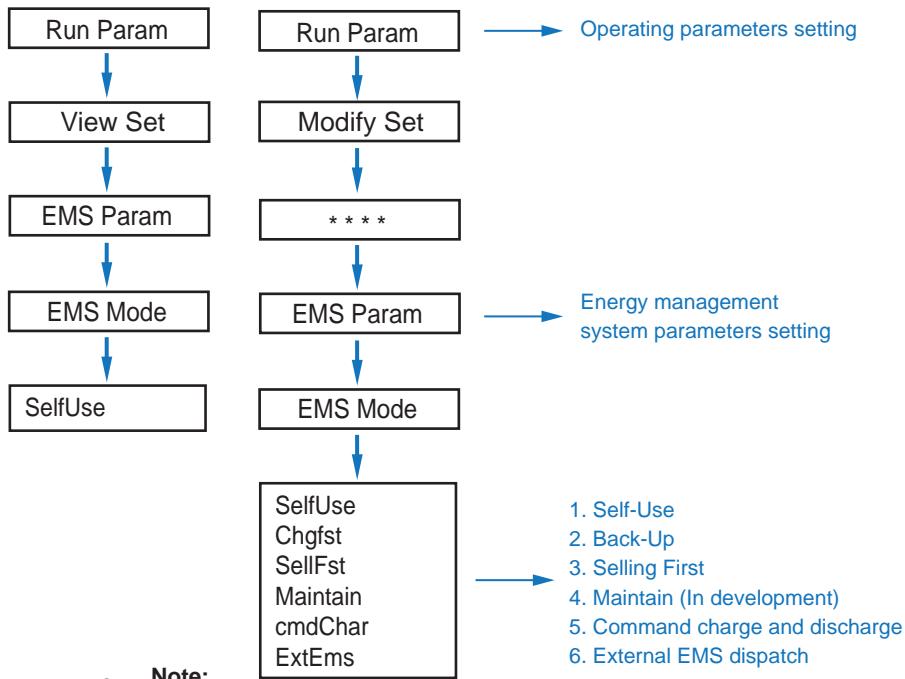
Note:

For detailed introduction of each mode, please refer to chapter 3.2 of the user manual.

1. Self-Use
2. Back-Up
3. Selling First
4. Maintain (In development)
5. Command charge and discharge
6. External EMS dispatch


5.3.7 Time of Use

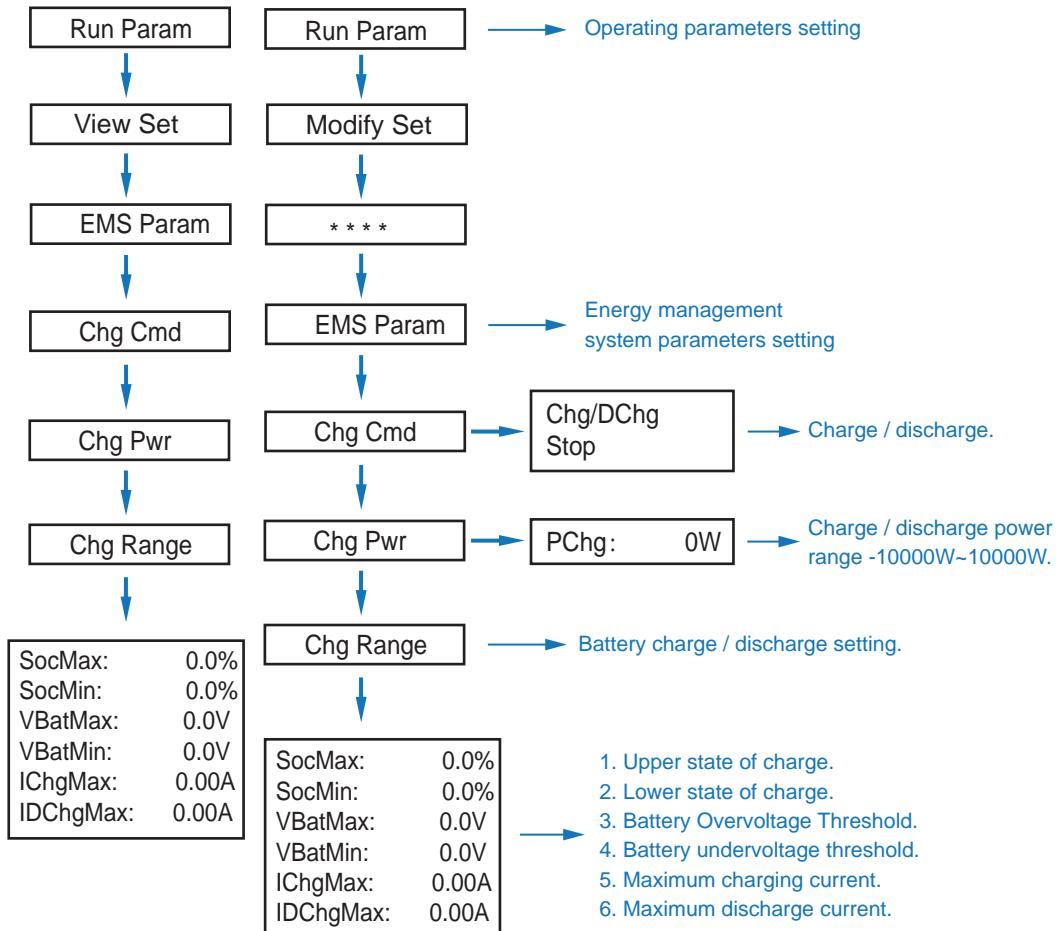


Note:


Timed charge and discharge need to complete the three settings of "Chg Cmd", "Chg Pwr" and "Chg Range", otherwise it will not work properly.

5.3.8 AC Charging

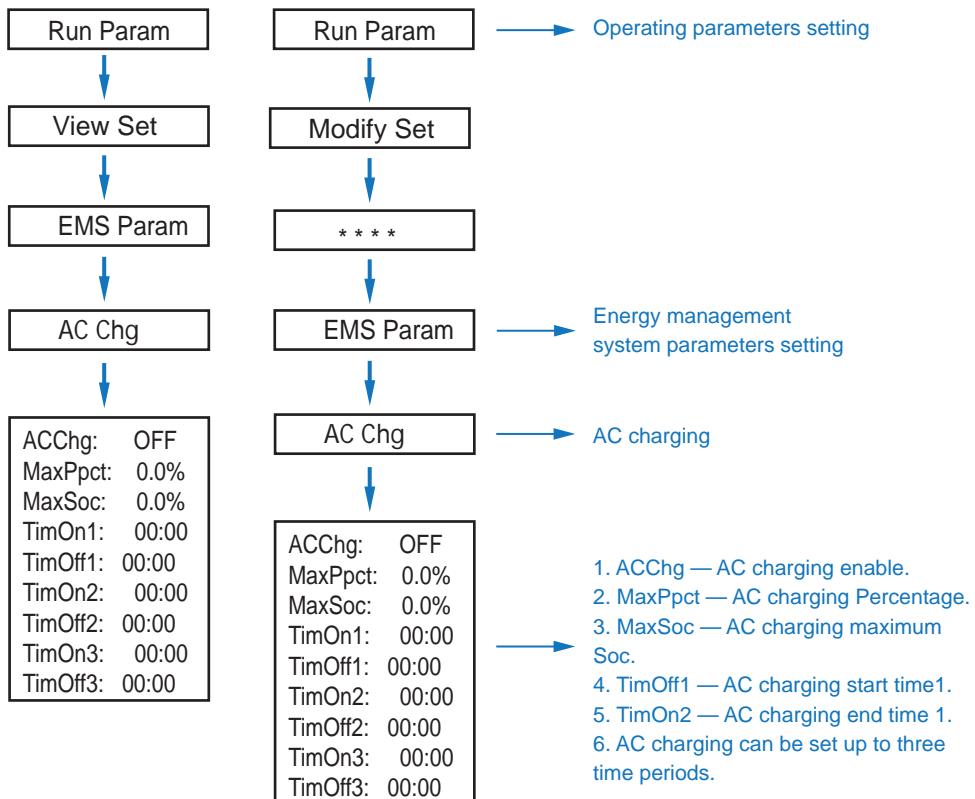


5.3.9 Forced Charging

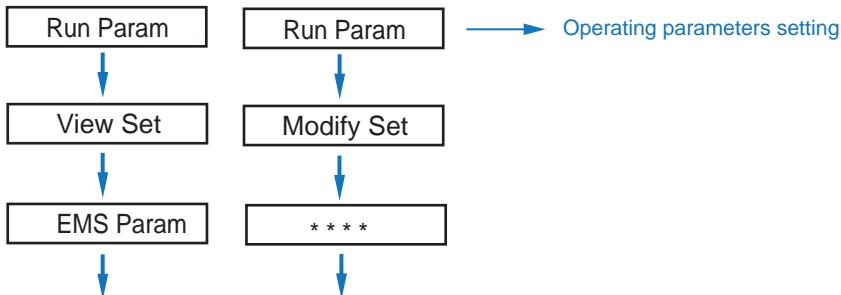


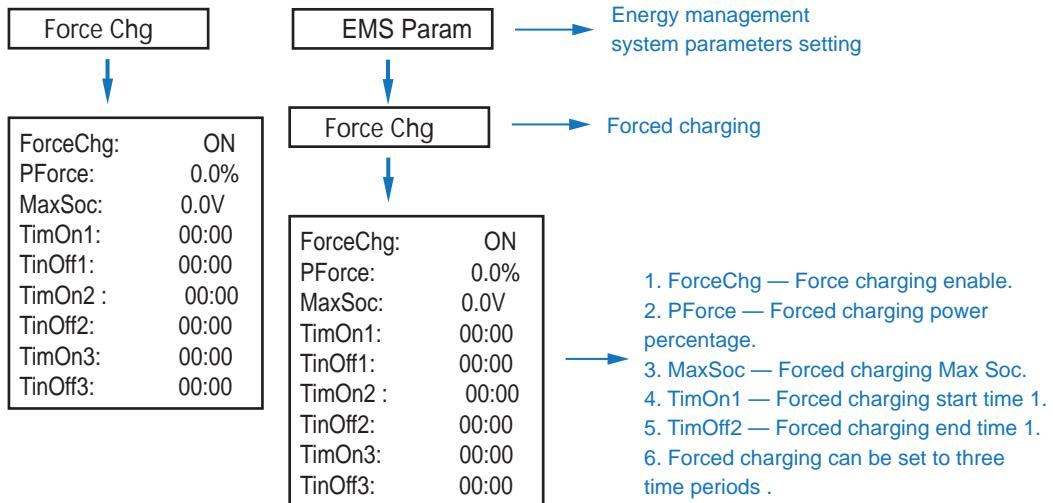

5.3.10 Forced Discharging

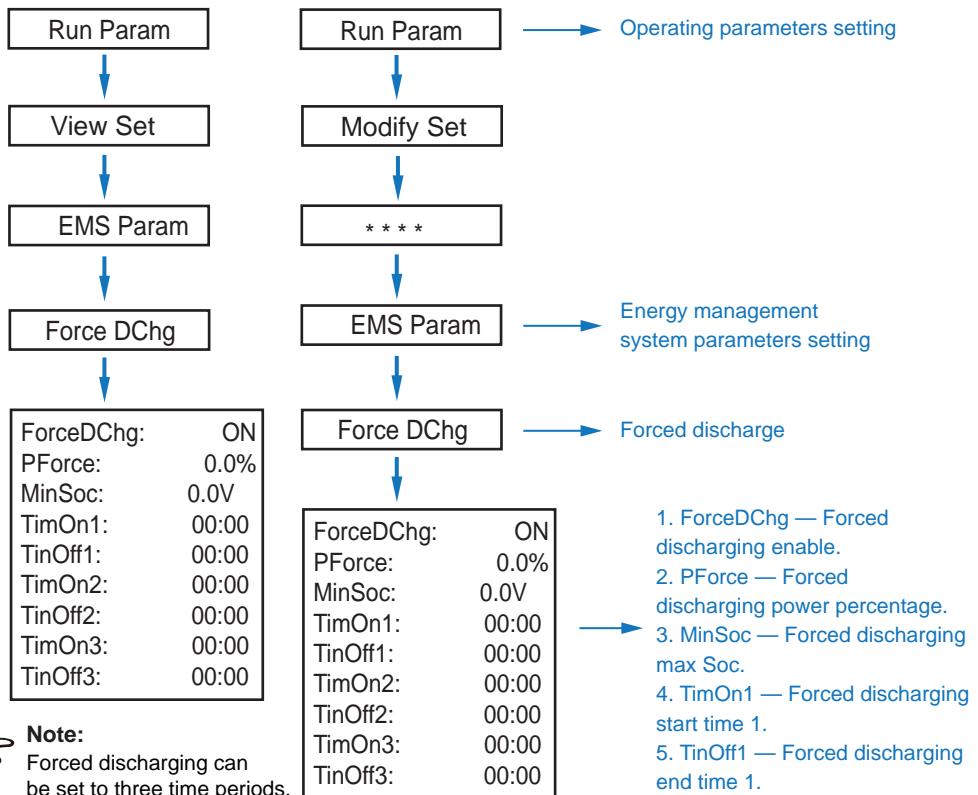


5.3.11 Protection Parameters

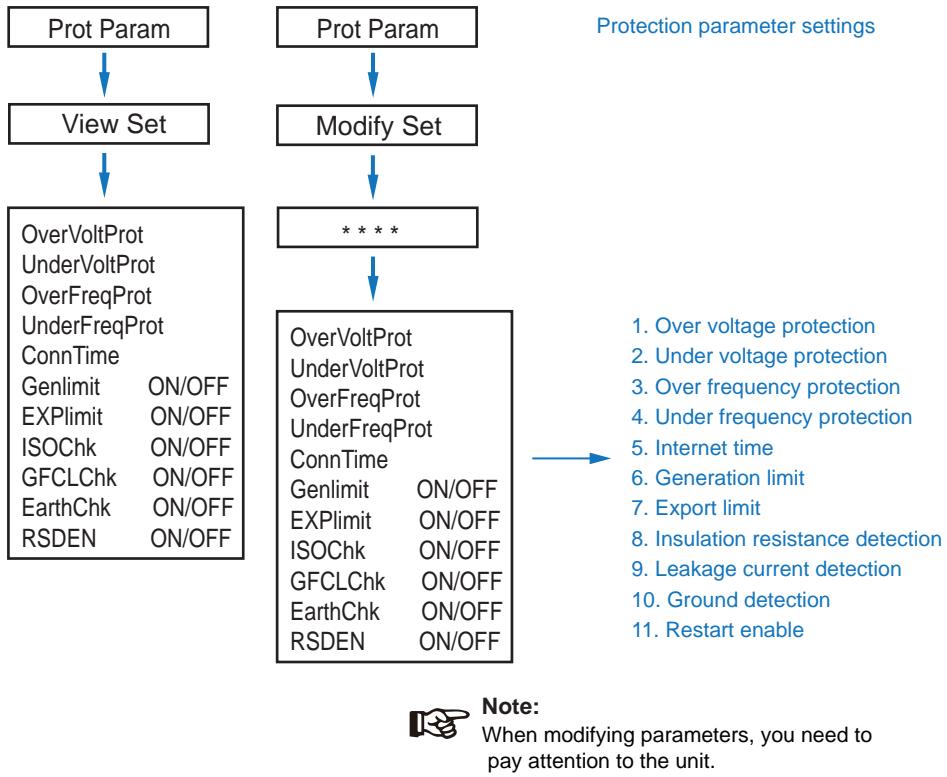


5.3.12 Multi-machine in Parallel




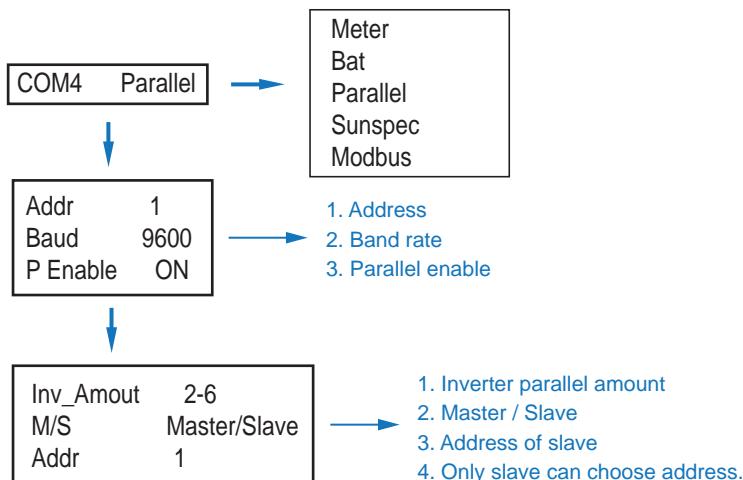

5.3.13 DRM Setting (DRMS)

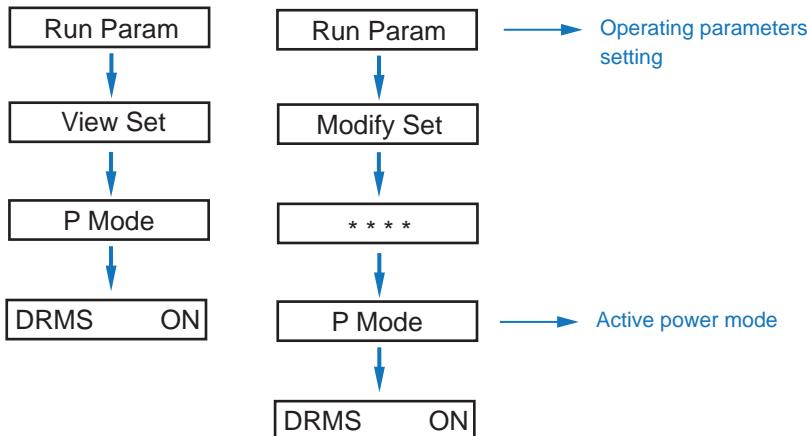

5.3.14 Ground detection

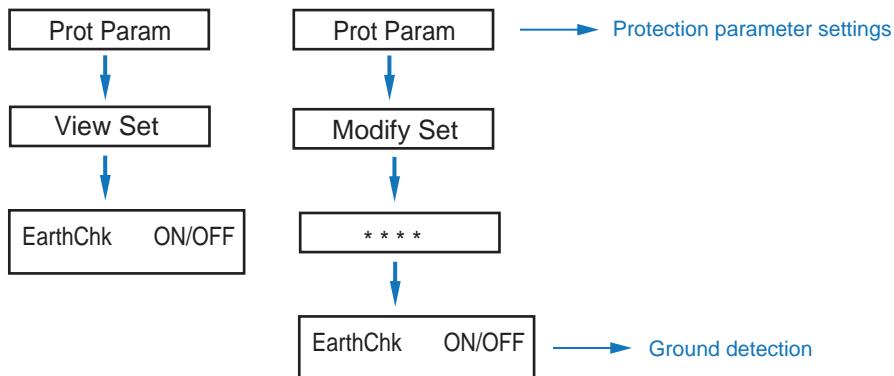
Note:

This inverter complies with IEC 62109-2 clause 13.9 for earth fault alarm monitoring.


If an Earth Fault Alarm occurs, the fault code "J 04" will be displayed on the inverter screen / the LED indicator "Alarm" will light up.


Note:

The product is to be installed in a high traffic area where the fault is likely to be seen.

5.3.15 Enable Power Quality Response Modes

a. Active Power Control Power Factor

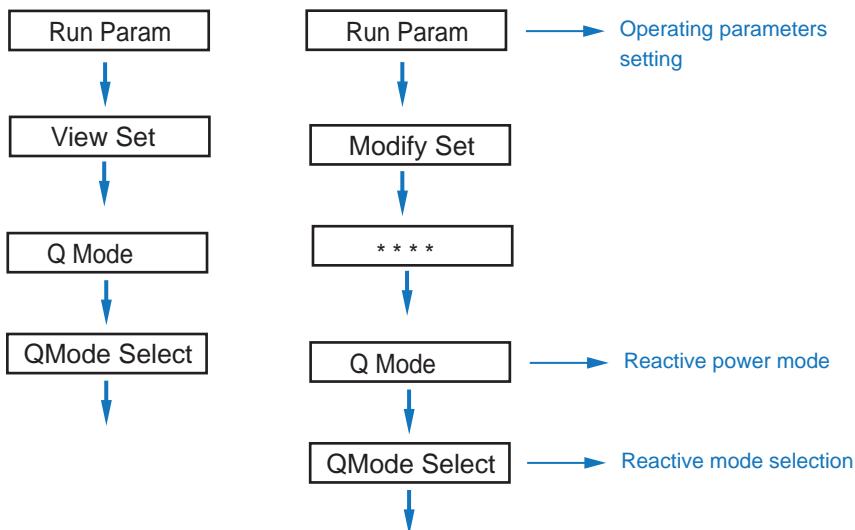


Q(P) Set	
P1:	50.0%
Q1:	0.0%
P2:	100.0%
Q2:	-44.0%
P3:	100.0%
Q3:	-44.0%
P4:	100.0%
Q4:	-44.0%


Q(P) Set	
P1:	50.0%
Q1:	0.0%
P2:	100.0%
Q2:	-44.0%
P3:	100.0%
Q3:	-44.0%
P4:	100.0%
Q4:	-44.0%

P:Rated active power percentage
Q:Rated reactive power percentage



Note:
When Q(P) Set is set, Power Quality Response Mode is enabled

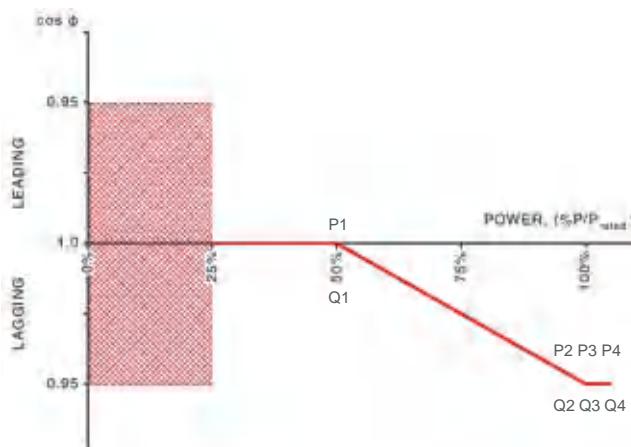


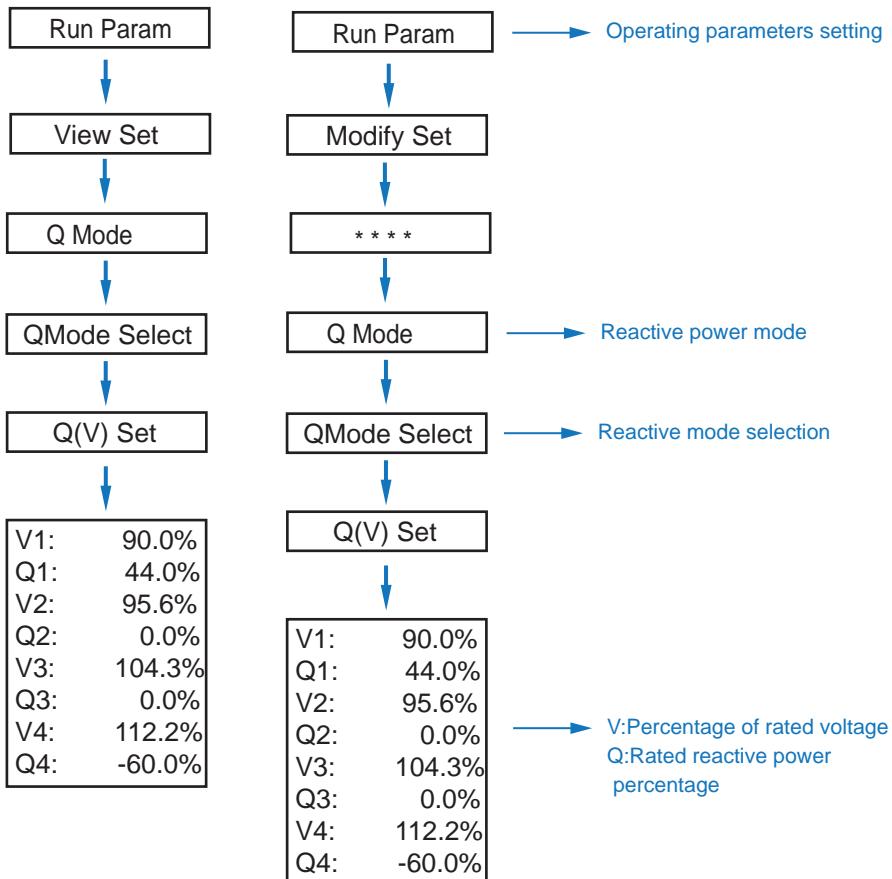b. Voltage Control Reactive Power


Note:
When Q(V) Set is set, Power Quality Response Mode is enabled





Note:
Volt-var is enabled by default.

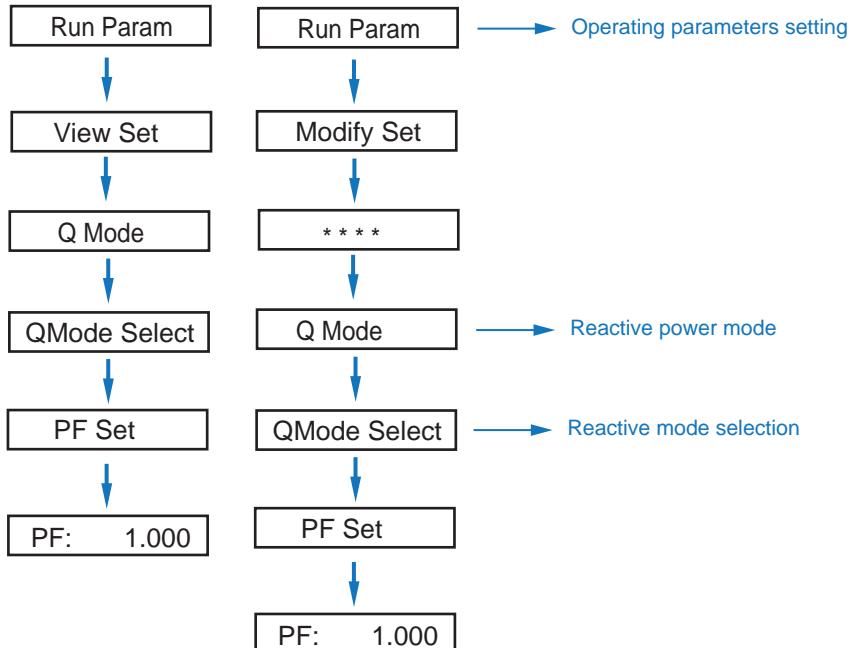c. Fixed Power Factor**Note:**


Set PF (-0.8, +0.8), Resolution 0.001.

When PF Set is set, Power Quality Response Mode is enabled

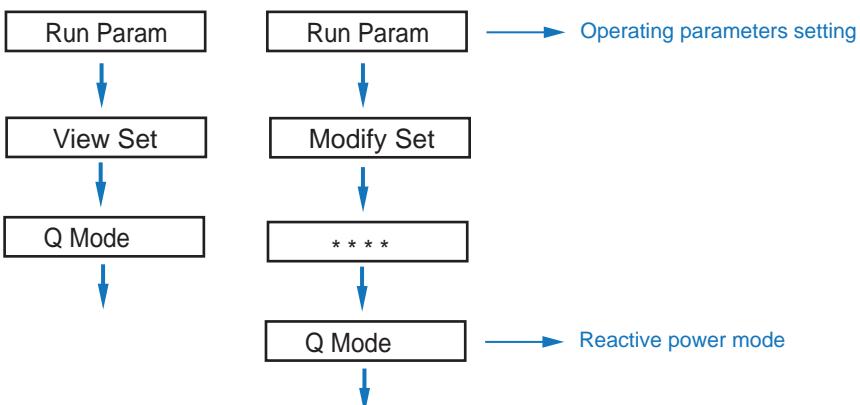d. Fixed Reactive Power (%)

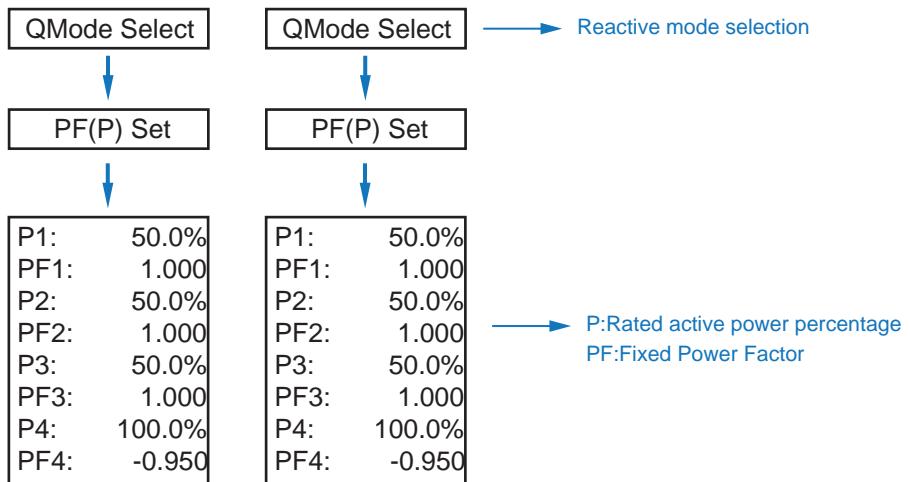


5.3.16 Disable Power Quality Response Modes

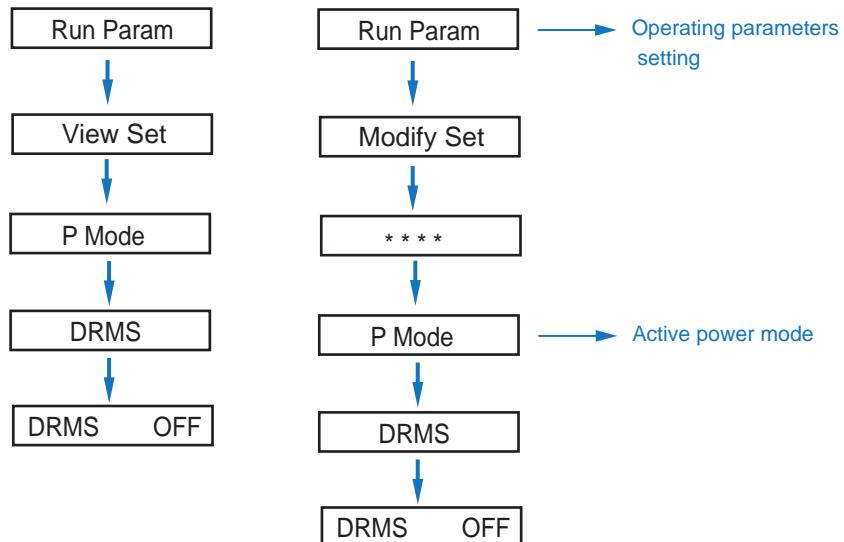


5.3.17 Active Power Mode Set

a. Active Power PercentageS

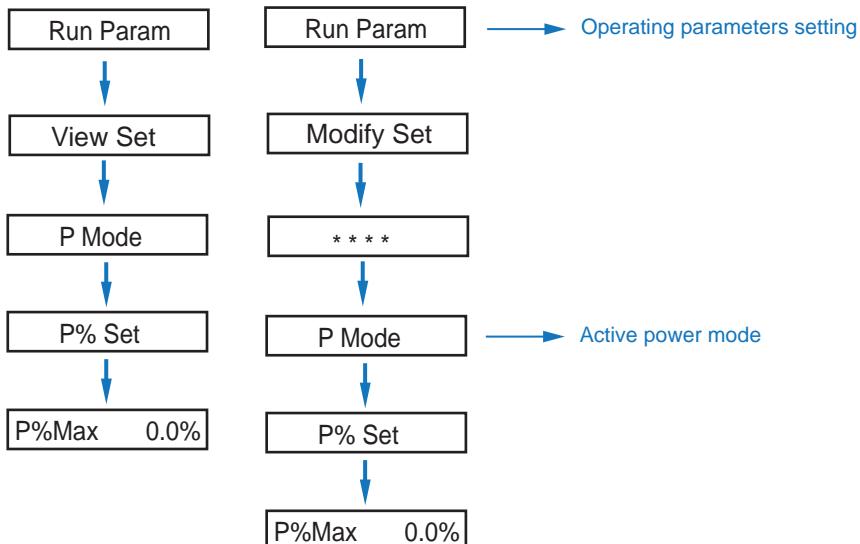

b. Volt-watt

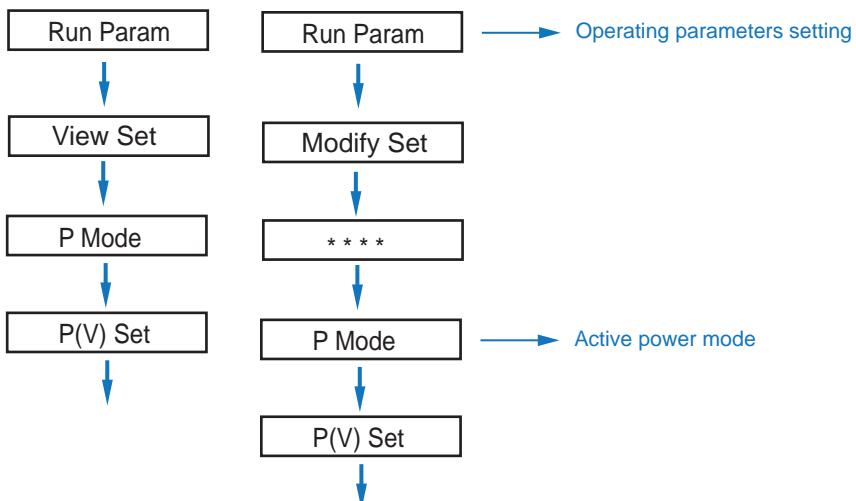

V1:	100.0%
P1:	100.0%
V2:	100.0%
P2:	100.0%
V3:	110.0%
P3:	100.0%
V4:	113.0%
P4:	20.0%

V1:	100.0%
P1:	100.0%
V2:	100.0%
P2:	100.0%
V3:	110.0%
P3:	100.0%
V4:	113.0%
P4:	20.0%

→ P:Rated active power percentage
V:Percentage of rated voltage




Note:

The volt-watt response mode shall be enabled by default.





Note:

When charging, the software has set the parameters by default.

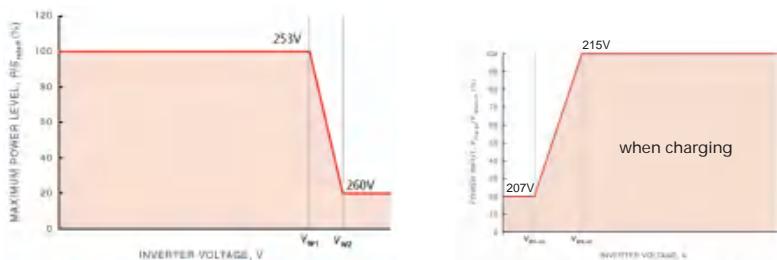


5.3.18 Frequency protection range (Freq Range) Setting

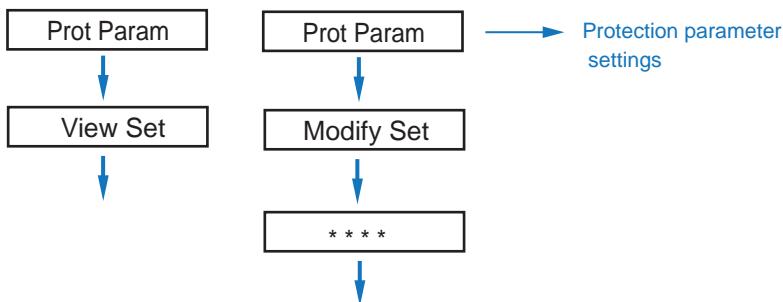


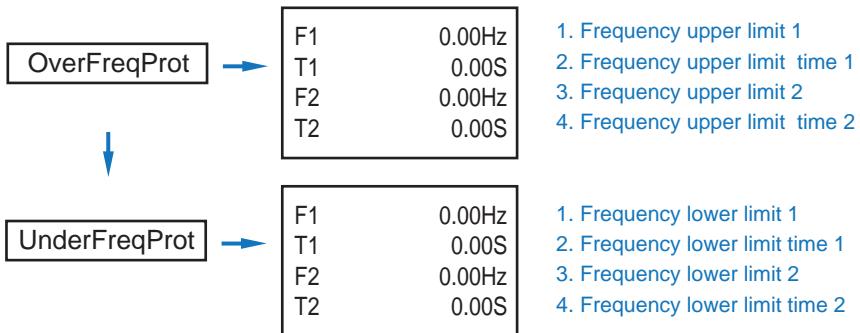


5.3.19 Voltage protection range (Volt Range) set

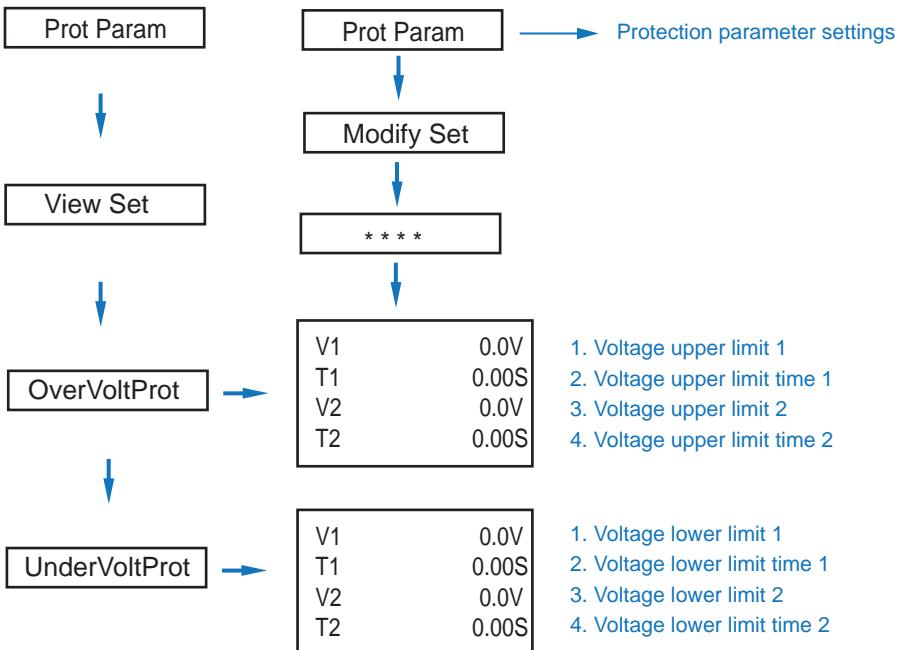

5.3.20 Version

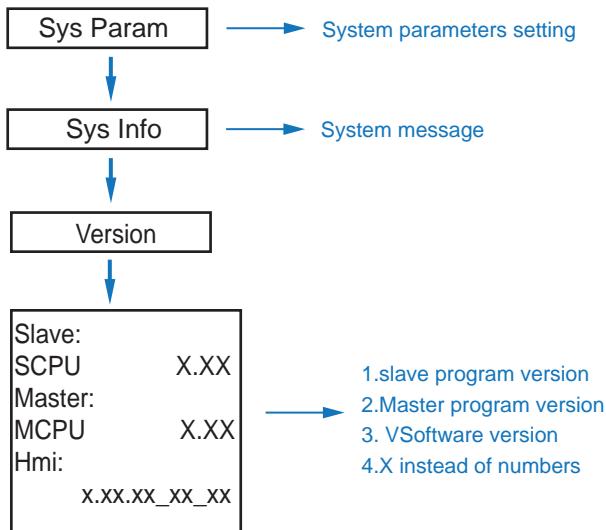

5.3.21 Install Dual Meters

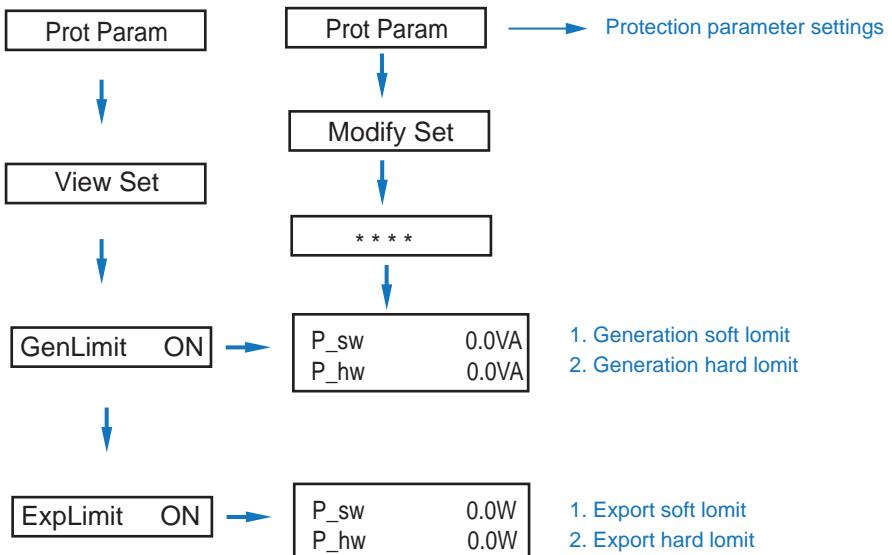

5.3.22 Active anti-islanding protection

The method of active anti-islanding protection:

Shifting the frequency of the inverter away from nominal conditions in the absence of a reference frequency (frequency shift).

6. Power ON/OFF

Please check the following requirements before testing:

- Installation location is suitable according to Chapter 4.1.3.
- All electrical wires are connected tightly, including PV modules, battery and AC side(Such as the grid side, EPS side, Gen side).
- Earth line and Smart meter/CT line are connected.
- AF-DF hybrid inverters should be set according to the required local grid standard.
- More information please contact with Afore or distributors.

6.1 Power ON

- Turn on DC switch and Battery switch.
- After LCD lighting, hybrid inverter should be set following Chapter 5.3 at the first time.
- When inverter running under normal mode, Running indicator will light up(Ref. to Chapter 5.1).

6.2 Power OFF

- Turn off DC switch, Battery switch and all extra-breaker.



Note:

Hybrid inverter should be restarted after 5 minutes.

6.3 Restart

Restart Hybrid inverter, please follow steps as below:

- Shutdown the inverter Ref. to Chapter6.2.
- Start the inverter Ref. to Chapter 6.1.

7. Maintenance & Trouble Shooting

7.1 Maintenance

Periodically maintenance are necessary, please follow steps as below.

- PV connection: twice a year
- AC connection(Grid and EPS) : twice a year
- Battery connection: twice a year
- Earth connection: twice a year
- Heat sink: clean with dry towel once a year

7.2 Trouble Shooting

The fault messages are displayed when fault occurs, please check trouble shooting table and find related solutions.

Fault Code and Trouble Shooting

Type of Fault	Code	Name	Description	Recommend Solution
PV Fault	A01	PvConnectFault	PV connection type different from setup	<ul style="list-style-type: none"> • Check PV modules connection • Check PV Mode setup Ref. Chapter 5.3.
	A02	IsoFault	ISO check among PV panels/ wires and ground is abnormal.	<ul style="list-style-type: none"> • Check PV modules wires, those wires are soaked or damaged, and then carry out rectification. • if the fault occurs continuously and frequently, please ask help for local distributors.
	A03	PvAfciFault	PV current arcing	<ul style="list-style-type: none"> • Check PV modules wires and connectors broken or loose connect, and then carry out rectification. • If the fault occurs continuously and frequently, please ask help for local distributors.
	A04	Pv1OverVoltFault	PV Voltage over	<ul style="list-style-type: none"> • Reconfiguration of PV strings, reduce the PV number of a PV string to reducing inverter PV input voltage. • Suggestion that contacting with local distributors.
	A05	Pv2OverVoltFault		
	A06	Pv3OverVoltFault		
	A07	Pv4OverVoltFault		
	A08	Pv5OverVoltFault		
	A09	Pv6OverVoltFault		
	A10	Pv7OverVoltFault		
	A11	Pv8OverVoltFault		
	A12	Pv9OverVoltFault		
	A13	Pv10OverVoltFault		
	A14	Pv11OverVoltFault		
	A15	Pv12OverVoltFault		
PV Reverse	A16	PV1ReverseFault	PV(+) and PV(-) reversed Connection	<ul style="list-style-type: none"> • Check PV(+) and PV(-) Connect whether reversed or not. • If reversed, make correction.
	A17	PV2ReverseFault		
	A18	PV3ReverseFault		
	A19	PV4ReverseFault		
	A20	PV5ReverseFault		
	A21	PV6ReverseFault		

Type of Fault	Code	Name	Description	Recommend Solution
PV Fault	A22	PV7ReverseFault	PV(+) and PV(-) reversed Connection	<ul style="list-style-type: none"> • Check PV modules partial occlusion or cells damaged. • Check PV module wires and connectors broken or loose connect, then repair it.
	A23	PV8ReverseFault		
	A24	PV9ReverseFault		
	A25	PV10ReverseFault		
	A26	PV11ReverseFault		
	A27	PV12ReverseFault		
	A33	Pv1AbnormalFault		
	A34	Pv2AbnormalFault		
	A35	Pv3AbnormalFault		
	A36	Pv4AbnormalFault		
	A37	Pv5AbnormalFault		
	A38	Pv6AbnormalFault		
	A39	Pv7AbnormalFault		
	A40	Pv8AbnormalFault		
	A41	Pv9AbnormalFault		
	A42	Pv10AbnormalFault		
	A43	Pv11AbnormalFault		
	A44	Pv12AbnormalFault		
	A45	Pv13AbnormalFault		
	A46	Pv14AbnormalFault		
	A47	Pv15AbnormalFault		
	A48	Pv16AbnormalFault		
	A49	Pv17AbnormalFault		
	A50	Pv18AbnormalFault		
	A51	Pv19AbnormalFault		
	A52	Pv20AbnormalFault		
	A53	Pv21AbnormalFault		
	A54	Pv22AbnormalFault		
	A55	Pv23AbnormalFault		
	A56	Pv24AbnormalFault		

Type of Fault	Code	Name	Description	Recommend Solution
Battery Fault	B01	PcsBatOverVoltFault	Battery voltage over or under	<ul style="list-style-type: none"> • Check inverters connected battery lines and connectors broken or loose connect. • Carry out rectification if broken or loose. • Checking battery voltage is abnormal or not, then maintenance or change new battery.
	B02	PcsBatUnderVoltFault		
	B03	PcsBatInsOverVoltFault		
	B04	PcsBatReversedFault	Bat. (+) and Bat. (-) are reversed.	<ul style="list-style-type: none"> • Check Bat.(+) and Bat.(-)connect reversed or not. • Make correction If reversed.
	B05	PcsBatConnectFault	Battery wires loose	<ul style="list-style-type: none"> • Check battery wires and connectors damage or loose connect. • Carry out rectification if break.
	B06	PcsBatComFault	Battery communication abnormal	<ul style="list-style-type: none"> • Check battery side communication wires damage or loose connect, and then carry out rectification. • Check battery is off or other abnormal, then Mastertenance battery or change new battery.
	B07	PcsBatTempSensorOpen	Battery temperature sensor abnormal	<ul style="list-style-type: none"> • Check battery temperature sensor and connected wires damage or not , then rectification or change new one.
	B08	PcsBatTempSensorShort		
	B09	BmsBatSystemFault	All these faults will be detected or reported by battery BMS.	<ul style="list-style-type: none"> • If specific fault high temperature or low temperature, then should change battery installed environment temperature. • Restart battery, maybe can working as normal. • If this fault occurs continuously and frequently, please ask help for local distributors.
	B10	BmsBatVolOverFault		
	B11	BmsBatVolUnderFault		
	B12	BmsCellVolOverFault		
	B13	BmsCellVolUnderFault		
	B14	BmsCellVolUnbalanceFault		
	B15	BatChgCurOverFault		
	B16	BatDChgCurOverFault		
	B17	BatTemperatureOverFault		
	B18	BatTemperatureUnderFault		
	B19	CelTemperatureOverFault		
	B20	CelTemperatureUnderFault		
	B21	BatIsoFault		
	B22	BatSocLowFault		
	B23	BmsInterComFault		
	B24	BatRelayFault		

Type of Fault	Code	Name	Description	Recommend Solution
Battery Fault	B25	BatPreChaFault		
	B26	BmsBatChgMosFault		
	B27	BmsBatDChgMosFault		
	B28	BMSVolOVFault		
	B29	BMSVolILFault		
	B30	VolLockOpenFault		
	B31	VolLockShortFault		
	B32	ChgRefOVFault		
	C01	GridLossFault	Grid lost (islanding)	<ul style="list-style-type: none"> Inverter will restart automatically when the grid return to normal. Check inverter connected with grid connectors and cable normal or not.
	C02	GridUnbalanVoltFault	Grid Voltage unbalanced.	<ul style="list-style-type: none"> The inverter will restart automatically when the grid three phase return to normal. Check inverter connected with the grid connectors and wires normal or not.
	C03	GridInstOverVoltFault	Grid instantaneous voltage over	<ul style="list-style-type: none"> The inverter will restart automatically when the grid three phase return to normal. Contact with local distributor or required grid company adjust protection parameters.
	C04	Grid10MinOverVoltFault	Grid voltage Over by 10 Minutes	<ul style="list-style-type: none"> The inverter will restart automatically when the grid three phase return to normal. Contact with local distributor or required grid company adjust 10 minutes protection voltage parameters.
	C05	GridOverVoltFault	Grid voltage over	
	C06	GridUnderVoltFault	Grid voltage under	
	C07	GridLineOverVoltFault	Grid line voltage over	
	C08	GridLineUnderVoltFault	Grid line voltage under	
	C09	GridOverFreqFault	Grid Frequency over	<ul style="list-style-type: none"> The inverter will restart automatically when the grid three phase return to normal. Contact with local distributor or required grid company adjust frequency protection parameters.
	C10	GridUnderFreqFault	Grid Frequency under	<ul style="list-style-type: none"> The inverter will restart automatically when the grid three phase return to normal. Contact with local distributor or required grid company adjust frequency protection parameters.

Type of Fault	Code	Name	Description	Recommend Solution
Off-grid Fault	D01	UpsOverPowerFault	Off-grid load over	<ul style="list-style-type: none"> Reduce loads. If sometimes overload, it can be ignored, when generation power enough can be recovery. If those faults occurs continuously and frequently, please ask help for local distributors.
	D02	GridConflictFault	Grid connected to Back-up terminal	<ul style="list-style-type: none"> Check the off-grid port connection correct, disconnect both off-grid and grid ports.
	D03	GenOverVoltFault	GenOverVoltFault	<ul style="list-style-type: none"> Adjust generator running parameters, make the output voltage, frequency in allowed range. If this fault occurs continuously and frequently, please ask help for local distributors.
	D04	GenUnderVoltFault	GenUnderVoltFault	
	D05	GenOverFreqFault	GenOverFreqFault	
	D06	GenUnderFreqFault	GenUnderFreqFault	
DC Fault	E01	Pv1HwOverCurrFault	PV current over, triggered by hardware protection circuit	<ul style="list-style-type: none"> Power off, then restart (Ref. Chapter8). If those faults occurs continuously and frequently, please ask help for local distributors.
	E02	Pv2HwOverCurrFault		
	E03	Pv3HwOverCurrFault		
	E04	Pv4HwOverCurrFault		
	E05	Pv5HwOverCurrFault		
	E06	Pv6HwOverCurrFault		
	E07	Pv7HwOverCurrFault		
	E08	Pv8HwOverCurrFault		
	E09	Pv9HwOverCurrFault		
	E10	Pv10HwOverCurrFault		
	E11	Pv11HwOverCurrFault		
	E12	Pv12HwOverCurrFault		
	E13	Pv1SwOverCurrFault	PV current over, triggered by Software logic.	<ul style="list-style-type: none"> Power off, power on then restart. If those faults occurs continuously and frequently, please ask help for local distributors.
	E14	Pv2SwOverCurrFault		
	E15	Pv3SwOverCurrFault		
	E16	Pv4SwOverCurrFault		
	E17	Pv5SwOverCurrFault		
	E18	Pv6SwOverCurrFault		
	E19	Pv7SwOverCurrFault		
	E20	Pv8SwOverCurrFault		

Type of Fault	Code	Name	Description	Recommend Solution	
DC Fault	E21	Pv9SwOverCurrFault	PV boost circuit abnormal when self checking	<ul style="list-style-type: none"> • Power off, then restart (Ref. Chapter8). • If those faults continuously and frequently, please ask help for local distributors. 	
	E22	Pv10SwOverCurrFault			
	E23	Pv11SwOverCurrFault			
	E24	Pv12SwOverCurrFault			
	E33	Boost1SelfCheck(boost)Fault			
	E34	Boost2SelfCheck(boost)Fault			
	E35	Boost3SelfCheck(boost)Fault			
	E36	Boost4SelfCheck(boost)Fault			
	E37	Boost5SelfCheck(boost)Fault			
	E38	Boost6SelfCheck(boost)Fault			
	E39	Boost7SelfCheck(boost)Fault			
	E40	Boost8SelfCheck(boost)Fault			
	E41	Boost9SelfCheck(boost)Fault			
	E42	Boost10SelfCheck(boost)Fault			
	E43	Boost11SelfCheck(boost)Fault			
	E44	Boost12SelfCheck(boost)Fault			
DC Fault	E45	BusHwOverVoltFault	Bus voltage over	<ul style="list-style-type: none"> • Power off, then restart (Ref. Chapter8). • If those faults continuously and frequently, please ask help for local distributors. 	
	E46	BusHwOverHalfVoltFault			
	E47	BusSwOverVoltFault			
	E48	BusSwOverHalfVoltFault			
	E49	BusSwUnderVoltFault	Bus voltage under as running		
DC Fault	E50	BusUnbalancedFault	DC Bus voltage unbalanced	<ul style="list-style-type: none"> • Power off, then restart (Ref. Chapter8). • If those faults continuously and frequently, please ask help for local distributors. 	
	E51	BusBalBridgeHwOver-CurFault	Bus Controller current over		
	E52	BusBalBridgeSwOver-CurFault			
	E53	BusBalBridgeSelf-CheckFault	Bus Controller abnormal when self checking	<ul style="list-style-type: none"> • Power off, then restart (Ref. Chapter8). • If those faults continuously and frequently, please ask help for local distributors. 	
	E54	BDCHwOverCurrFault	BiDC current over		
	E55	BDCSwOverCurrFault			
	E56	BDCSelfCheckFault	BiDC abnormal as self checking	<ul style="list-style-type: none"> • Power off, then restart (Ref. Chapter8). • If those faults continuously and frequently, please ask help for local distributors. 	
	E57	BDCSwOverVoltFault	BiDC voltage over		
	E58	TransHwOverCurrFault	BiDC current over		

Type of Fault	Code	Name	Description	Recommend Solution
	E59	BDCFuseFault	BiDC fuse broken	<ul style="list-style-type: none"> • Change fuse.
	E60	BDCRelayFault	BiDC relay abnormal	<ul style="list-style-type: none"> • Power off, then restart (Ref. Chapter8). • If those faults continuously and frequently, please ask help for local distributors.
AC Fault	F01	HwOverFault	All over current/ voltage by protection hardware	<ul style="list-style-type: none"> • Power off, then restart (Ref. Chapter8). • If those faults occurs continuously and frequently, please ask help for local distributors.
	F02	InvHwOverCurrFault	Ac over current by protection hardware	
	F03	InvROverCurrFault	R phase current over	
	F04	InvSOverCurrFault	S phase current over	
	F05	InvTOverCurrFault	T phase current over	
	F06	GridUnbalanCurrFault	On-grid current unbalanced	
	F07	DclnjOverCurrFault	DC injection current over	
	F08	AcOverLeakCurrFault	Ac side leakage current over	<ul style="list-style-type: none"> • Check AC insulation and ground wires connect ground is well or not, then repair it. • Power off, then restart (Ref. Chapter8).. • If those fault occurs continuously and frequently, please ask help for local distributors.
	F09	PLLFault	PLL abnormal	<ul style="list-style-type: none"> • Power off, then restart (Ref. Chapter8). • If those fault occurs continuously and frequently, please ask help for local distributors.
	F10	GridRelayFault	Grid relay abnormal	
	F11	UpsRelayFault	Ups relay abnormal	
	F12	GenRelayFault	Generator relay abnormal	
	F13	Relay4Fault	Relay4 abnormal	
	F14	UpsROverCurrFault	Off-grid output current over	<ul style="list-style-type: none"> • When off-grid the load start impulse current is over, reduce the start impulse current load. • Power off, then restart (Ref. Chapter8). • If those fault occurs continuously and frequently, please ask help for local distributors.
	F15	UpsSOverCurrFault		
	F16	UpsTOverCurrFault		
	F17	GenROverCurrFault	Generator current over	<ul style="list-style-type: none"> • Check generator output voltage, frequency is stability, and adjust generator. • Power off, then restart(Ref. Chapter8). • If those fault occurs continuously and frequently, please ask help for local distributors.
	F18	GenSOverCurrFault		
	F19	GenTOverCurrFault		
	F20	GenReversePowerFault	Active power injected to generator	

Type of Fault	Code	Name	Description	Recommend Solution	
AC Fault	F21	UpsOverVoltFault	Off-grid output voltage over or under	<ul style="list-style-type: none"> Power off, then restart (Ref. Chapter8). If those faults occurs continuously and frequently, please ask help for local distributors. 	
	F22	UpsUnderVoltFault			
	F23	UpsOverFreqFault	Off-grid output frequency over or under		
	F24	UpsUnderFreqFault			
	F25	DcInjOverVoltFault	Off-grid DC injection voltage over		
System Fault	G01	PV1CurAdChanFault	Sampling hardware abnormal	<ul style="list-style-type: none"> Power off, then restart (Ref. Chapter8). If those faults occurs continuously and frequently, please ask help for local distributors. 	
	G02	PV2CurAdChanFault			
	G03	PV3CurAdChanFault			
	G04	PV4CurAdChanFault			
	G05	PV5CurAdChanFault			
	G06	PV6CurAdChanFault			
	G07	PV7CurAdChanFault			
	G08	PV8CurAdChanFault			
	G09	PV9CurAdChanFault			
	G10	PV10CurAdChanFault			
	G11	PV11CurAdChanFault			
	G12	PV12CurAdChanFault			
	G13	BDCCurrAdChanFault			
	G14	TransCurAdChanFault			
	G15	BalBrigCurAdChanFault			
	G16	RInvCurAdChanFault			
	G17	SInvCurAdChanFault			
	G18	TInvCurAdChanFault			
	G19	RInvDciAdChanFault			
	G20	SInvDciAdChanFault			
	G21	TInvDciAdChanFault			
	G22	LeakCurAdChanFault			
	G23	VoltRefAdChanFault			
	G24	UpsRCurAdChanFault			

Type of Fault	Code	Name	Description	Recommend Solution	
System Fault	G25	UpsSCurAdChanFault			
	G26	UpsTCurAdChanFault			
	G27	GenRCurAdChanFault			
	G28	GenSCurAdChanFault			
	G29	GenTCurAdChanFault			
	G30	UpsRDcvAdChanFault			
	G31	UpsSDcvAdChanFault			
	G32	UpsTDcvAdChanFault			
	G37	TempAdChanFault	All temperature sensors abnormal	<ul style="list-style-type: none"> • Power off, then restart (Ref. Chapter8). • If those faults occurs continuously and frequently, please ask help for local distributors. 	
	G38	VoltAdConflictFault	The sample value of PV, battery and BUS voltage inconsistent		
	G39	CPUAdConflictFault	The sample value between master CPU and slaver CPU inconsistent		
	G40	PowerCalcConflictFault	Power value between PV, battery and AC output inconsistent		
	G41	EnvirOverTempFault	Installation environment temperature over or low	<ul style="list-style-type: none"> • Change or improve the installation environment temperature, make running temperature suitable. • Power off, then restart (Ref. Chapter8). • If those faults occurs continuously and frequently, please ask help for local distributors. 	
	G42	EnvirLowTempFault			
	G43	CoolingOverTempFault	Cooling temperature over or low		
	G44	CoolingLowTempFault			
	G45	OverTemp3Fault	Temperature3 over or low		
	G46	LowTemp3Fault			
	G47	CpuOverTempFault	CPU temperature over	<ul style="list-style-type: none"> • Power off, then restart (Ref. Chapter8). • If those faults occurs continuously and frequently, please ask help for local distributors. 	
	G48	ModelConflictFault	Version conflict with inverter		
Inner Warning	I01	InterFanWarning	Fan abnormal	<ul style="list-style-type: none"> • Remove foreign matter logged in fan. • If those faults occurs continuously and frequently, please ask help for local distributors. 	
	I02	ExterFanWarning			
	I03	Fan3Warning			

Type of Fault	Code	Name	Description	Recommend Solution
Inner Warning	I04	EnvirTempAdChanWarning	Some temperature sensors abnormal	<ul style="list-style-type: none"> The warnings are not matter influence. Power off, then restart (Ref. Chapter8). If those faults occurs continuously and frequently, please ask help for local distributors.
	I05	CoolingTempAdChanWarning		
	I06	Temp3AdChanWarning		
	I07	ExtFlashComWarning	Flash abnormal	<ul style="list-style-type: none"> Power off, then restart (Ref. Chapter8). If this those faults continuously and frequently, please ask help for local distributors.
	I08	EepromComWarning	Eeprom abnormal	
	I09	SlaveComWarning	Communication between slaver CPU and master CPU abnormal	
	I10	HmiComWarning	HMI abnormal	
	I11	FreqCalcConflictWarning	Frequency value abnormal	
	I12	UnsetModel	Running model is not initial	<ul style="list-style-type: none"> Contact with local distributor.
	J01	MeterComWarning	Meter/CT abnormal	<ul style="list-style-type: none"> Check the smart meter model, connection or connectors are correct, any loose. if abnormal, repair or change. Power off, then restart (Ref. Chapter8). If those faults occurs continuously and frequently, please ask help for local distributors.
Outside Warning	J02	MeterConnectWarning	Wires connecting type of meter wrong	<ul style="list-style-type: none"> Check Meter/CT connection, installed place, and installed direction. if abnormal, re-installation. Power off, then restart (Ref. Chapter8). If this those faults continuously and frequently, please ask help for local distributors.
	J03	SohWarning	Battery SOH low	<ul style="list-style-type: none"> Contact with Battery manufacturer.
	J04	GndAbnormalWarning	Earth impedance over by cable loose and so on	<ul style="list-style-type: none"> Check earth line connection or earth connecting impedance. if abnormal, then adjust it. Power off, then restart (Ref. Chapter8). If this those faults continuously and frequently, please ask help for local distributors.
	J05	ParallelComWarning	Communication between master inverter and slaver ones abnormal in parallel mode	<ul style="list-style-type: none"> Check parallel connect communication wires damage, connectors loose, connect port correct or not. if not, then adjust it. Power off, then restart (Ref. Chapter8). If this those faults continuously and frequently, please ask help for local distributors.

8. Specifications

PV Input	AF1K-SL-1	AF1.5K-SL-1	AF2K-SL-1	AF2.5K-SL-1	AF3K-SL-1	AF3.6K-SL-1
Max. Input Power (kW)	1.5	2.3	3.0	3.8	4.5	5.4
Max. PV Voltage (V)			550			
MPPT Range (V)			80 - 500			
Full MPPT Range (V)	80 - 500	90 - 500	120 - 500	150 - 500	170 - 500	210 - 500
Min. Operating Voltage (Vdc)			100			
Startup Voltage (V)			100			
Max. Input Current (A)			18.5 x 1			
Max. Short Current (A)			26 x 1			
No. of MPP Tracker / No. of PV String			1 / 1			
Battery Port	AF1K-SL-1	AF1.5K-SL-1	AF2K-SL-1	AF2.5K-SL-1	AF3K-SL-1	AF3.6K-SL-1
Max. Charge/Discharge Power (kW)	1.0	1.5	2.0	2.5	3.0	3.6
Max. Charge/Discharge Current (A)	25	40	50	63	80	80
Battery Normal Voltage (V)			51.2			
Battery Voltage Range (V)			40 - 60			
Battery Type			Li-ion / Lead-acid			
AC Grid	AF1K-SL-1	AF1.5K-SL-1	AF2K-SL-1	AF2.5K-SL-1	AF3K-SL-1	AF3.6K-SL-1
Max Continuous Current (A)	5.0	7.0	10.0	12.0	14.0	17.0
Max Continuous Power (kVA)	1.0	1.5	2.0	2.5	3.0	3.6
Nominal Grid Current(A)	4.4	6.6	8.7	10.9	13.1	15.7
Rated Apparent Power (kVA)	1.0	1.5	2.0	2.5	3.0	3.6
Nominal Grid Voltage (V)			L/N/PE 230			
Nominal Grid Frequency (Hz)			50			
Power Factor			1.0 (-0.8+0.8 adjustable)			
Current THD (%)			< 3			
AC Load Output	AF1K-SL-1	AF1.5K-SL-1	AF2K-SL-1	AF2.5K-SL-1	AF3K-SL-1	AF3.6K-SL-1
Max Continuous Current (A)	5.0	7.0	10.0	12.0	14.0	17.0
Max Continuous Power (kVA)	1.0	1.5	2.0	2.5	3.0	3.6
Rated Apparent Power (kVA)	1.0	1.5	2.0	2.5	3.0	3.6
Max Peak Power (kVA) (10min)	1.5	2.3	3.0	3.8	4.5	5.4
Nominal AC Current (A)	4.4	6.6	8.7	10.9	13.1	15.7
Nominal AC Voltage L-N (V)			L/N/PE 230			
Nominal AC Frequency (Hz)			50			
Switching Time (s)			Seamless			
Voltage THD (%)			< 3			
Efficiency	AF1K-SL-1	AF1.5K-SL-1	AF2K-SL-1	AF2.5K-SL-1	AF3K-SL-1	AF3.6K-SL-1
CEC Efficiency (%)			97.0			
Max. Efficiency (%)			97.6			
PV to Bat. Efficiency (%)			98.1			
Bat. between AC Efficiency (%)			96.8			
Protection	AF1K-SL-1	AF1.5K-SL-1	AF2K-SL-1	AF2.5K-SL-1	AF3K-SL-1	AF3.6K-SL-1
PV Reverse Polarity Protection			Yes			
Over Current/Voltage Protection			Yes			
Anti-Islanding Protection			Yes			
AC Short Circuit Protection			Yes			
Residual Current Detection			Yes			
Ground Fault Monitoring			Yes			
Insulation Resister Detection			Yes			
PV Arc Detection			Yes			
Enclosure Protect Level			IP65			
General Data	AF1K-SL-1	AF1.5K-SL-1	AF2K-SL-1	AF2.5K-SL-1	AF3K-SL-1	AF3.6K-SL-1
Dimensions (W x H x D, mm)			370 x 513 x 192			
Weight (kg)			17			
Topology			Transformerless			
Cooling			Intelligent Fan			
Relatively Humidity			0 - 100 %			
Overvoltage category			OVC III (AC Main), OVC II (PV)			
Inverter Isolation			Non-isolated(PV-AC-BAT)			
Operating Temperature Range			-25 ~ +60°C (Derating 45°C)			
Operating Altitude (m)			2000			
Noise Emission (dB)			< 25			
Standby Consumption (W)			< 10			
Mounting			Wall Bracket			
Communication with RSD			SUNSPEC			
Display & Communication Interfaces			LCD, LED, RS485, CAN, Wi-Fi, GPRS, 4G			
Certification & Approvals			NRS97, G98/G99, EN50549-1, C10/C11, AS 4777.2, VDE-AR-N4105, VDE0126, IEC62040, IEC62109-1, IEC62109-2			
EMC			EN61000-6-2, EN61000-6-3			
DRM0	DRM1	DRM2	DRM3	DRM4	DRM5	DRM6
☒	☐	☐	☐	☐	☐	☐
DRM7	DRM8					
☐	☒					

PV Input	AF3K-SL	AF3.6K-SL	AF4K-SL	AF4.6K-SL	AF5K-SL	AF5.5K-SL	AF6K-SL										
Max. Input Power (kW)	4.5	5.4	6.0	6.9	7.5	8.3	9.0										
Max. PV Voltage (V)				550													
MPT Range (V)				80 - 500													
Full MPPT Range (V)	90 - 500	110 - 500	120 - 500	130 - 500	150 - 500	160 - 500	170 - 500										
Min. Operating Voltage (Vdc)				100													
Startup Voltage (V)				100													
Max. Input Current (A)				18.5 x 2													
Max. Short Current (A)				26 x 2													
No. of MPP Tracker / No. of PV String				2 / 2													
Battery Port	AF3K-SL	AF3.6K-SL	AF4K-SL	AF4.6K-SL	AF5K-SL	AF5.5K-SL	AF6K-SL										
Max. Charge/Discharge Power (kW)	3.0	3.6	4.0	4.6	4.8	4.8	4.8										
Max. Charge/Discharge Current (A)				80													
Battery Normal Voltage (V)				51.2													
Battery Voltage Range (V)				40 - 60													
Battery Type				Li-ion / Lead-acid													
AC Grid	AF3K-SL	AF3.6K-SL	AF4K-SL	AF4.6K-SL	AF5K-SL	AF5.5K-SL	AF6K-SL										
Max Continuous Current (A)	14.0	17.0	19.0	22.0	23.0	26.0	28.0										
Max Continuous Power (kVA)	3.0	3.6	4.0	4.6	5.0	5.5	6.0										
Nominal Grid Current(A)	13.1	15.7	17.4	20.0	21.8	24.0	26.1										
Rated Apparent Power (kVA)	3.0	3.6	4.0	4.6	5.0	5.5	6.0										
Nominal Grid Voltage (V)				L/N/PE 230													
Nominal Grid Frequency (Hz)				50													
Power Factor				1.0 (-0.8+0.8 adjustable)													
Current THD (%)				< 3													
AC Load Output	AF3K-SL	AF3.6K-SL	AF4K-SL	AF4.6K-SL	AF5K-SL	AF5.5K-SL	AF6K-SL										
Max Continuous Current (A)	14.0	17.0	19.0	22.0	23.0	26.0	28.0										
Max Continuous Power (kVA)	3.0	3.6	4.0	4.6	5.0	5.5	6.0										
Rated Apparent Power (kVA)	3.0	3.6	4.0	4.6	5.0	5.5	6.0										
Max Peak Power (kVA) (10min)	4.5	5.4	6.0	6.9	7.5	8.3	9.0										
Nominal AC Current (A)	13.1	15.7	17.4	20.0	21.8	24.0	26.1										
Nominal AC Voltage L-N (V)				L/N/PE 230													
Nominal AC Frequency (Hz)				50													
Switching Time (s)				Seamless													
Voltage THD (%)				< 3													
Efficiency	AF3K-SL	AF3.6K-SL	AF4K-SL	AF4.6K-SL	AF5K-SL	AF5.5K-SL	AF6K-SL										
CEC Efficiency (%)				97.0													
Max. Efficiency (%)				97.6													
PV to Bat. Efficiency (%)				98.1													
Bat. between AC Efficiency (%)				96.8													
Protection	AF3K-SL	AF3.6K-SL	AF4K-SL	AF4.6K-SL	AF5K-SL	AF6K-SL	AF6K-SL										
PV Reverse Polarity Protection				Yes													
Over Current/Voltage Protection				Yes													
Anti-Islanding Protection				Yes													
AC Short Circuit Protection				Yes													
Residual Current Detection				Yes													
Ground Fault Monitoring				Yes													
Insulation Resister Detection				Yes													
PV Arc Detection				Yes													
Enclosure Protect Level				IP65													
General Data	AF3K-SL	AF3.6K-SL	AF4K-SL	AF4.6K-SL	AF5K-SL	AF6K-SL	AF6K-SL										
Dimensions (Wx H x D, mm)				370 x 513 x 192													
Weight (kg)				17													
Topology				Transformerless													
Cooling				Intelligent Fan													
Relatively Humidity				0 - 100 %													
Overvoltage category				OVC III (AC Main), OVC II (PV)													
Inverter Isolation				Non-isolated(PV-AC-BAT)													
Operating Temperature Range				-25 ~ +60°C (Derating 45°C)													
Operating Altitude (m)				2000													
Noise Emission (dB)				< 25													
Standby Consumption (W)				< 10													
Mounting				Wall Bracket													
Communication with RSD				SUNSPEC													
Display & Communication Interfaces				LCD, LED, RS485, CAN, Wi-Fi, GPRS, 4G													
Certification & Approvals				NRS97, G98/G99, EN50549-1, C10/C11, AS 4777.2, VDE-AR-N4105, VDE0126, IEC62040, IEC62109-1, IEC62109-2													
EMC				EN61000-6-2, EN61000-6-3													
DRM0	<input checked="" type="checkbox"/>	DRM1	<input type="checkbox"/>	DRM2	<input type="checkbox"/>	DRM3	<input type="checkbox"/>	DRM4	<input type="checkbox"/>	DRM5	<input type="checkbox"/>	DRM6	<input type="checkbox"/>	DRM7	<input type="checkbox"/>	DRM8	<input type="checkbox"/>